

# Exceed your expectations

Mitsubishi's Magnetic Contactors and Magnetic Starters, continuously pushing the boundaries.



for a greener tomorrow

Eco Changes is the Mitsubishi Electric Group's environmental statement, and expresses the Group's stance on environmental management. Through a wide range of businesses, we are helping contribute to the realization of a sustainable society.



Mitsubishi Electric Corporation Nagoya Works is a factory certified for ISO14001 (standards for environmental management systems) and ISO9001 (standards for quality assurance management systems)

**⚠ Safety Warning**

To ensure proper use of the products listed in this catalog, please be sure to read the instruction manual prior to use.



**MITSUBISHI ELECTRIC CORPORATION**

HEAD OFFICE: TOKYO BLDG., 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN  
www.MitsubishiElectric.com

# MS-T Series

Mitsubishi Magnetic Contactors and Magnetic Starters



# Mitsubishi's Magnetic Contactors and Magnetic Starters continue to push the boundaries.


Mitsubishi Electric began making Magnetic Contactors and Magnetic Starters in 1933 with the first EC Series products. Since then consecutive new products and series have been highly appreciated by our customers. Our commitment to our customers remains to continuously develop our products to exceed their expectations.



## MS-T Series is released.

The Motor Circuit Breaker was released.

## The 80th anniversary

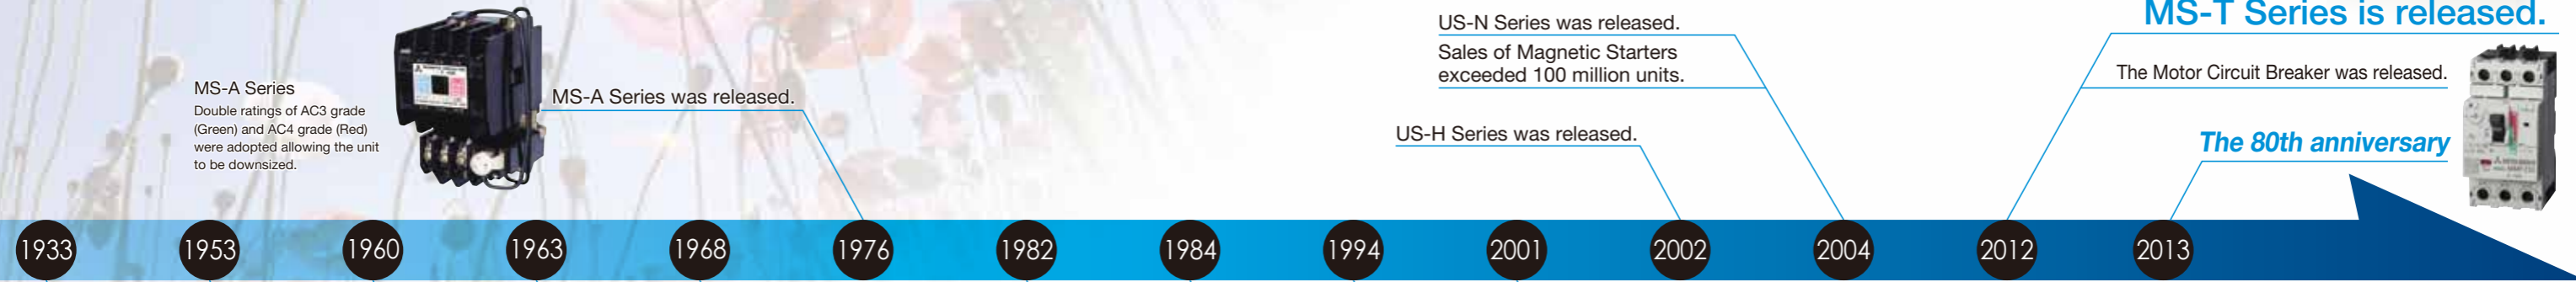

**MS-A Series**  
Double ratings of AC3 grade (Green) and AC4 grade (Red) were adopted allowing the unit to be downsized.



MS-A Series was released.

US-N Series was released.  
Sales of Magnetic Starters exceeded 100 million units.

US-H Series was released.

1933

1953

1960

1963

1968

1976

1982

1984

1994

2001

2002

2004

2012

2013

ES Series was released.

EK Series was released.

EC Series was released.

MS Series was released.

EM Series was released.



**EM Series**  
Mitsubishi Electric introduced its own design of horizontal movement Magnetic Contactor with the EM series.

**EK Series**  
In cooperation with Westinghouse Electric Corporation, the clapper type EK Magnetic Contactor was developed.



US-K Series was released.

MS-K Series was released.

MS-N Series was released.

SD-Q Series was released.



**MS-K Series**  
Lower power consumption was achieved through the use of AC operating, DC excited electromagnets.



**MS-N Series**  
The ground breaking "CAN terminal" proved to be an epoch making step in the design of Magnetic Contactors.



Meeting your needs	4
MS-T Series Introduction	6
Features of MS-T Series	6
List of Produced Models	10
Selection and Application	12
Specification List Table	12
Short-circuit coordination	13
Electrical Durability Curve	13
Operation coil rating	13
Contact Reliability	14
Application to Thermal Overload Relays	15
Specification List	15
Selection Table	16
Precautions for Use	16
Operating Characteristic Curve	17
Product Introduction	18
Magnetic Starters	18
Magnetic Contactors	19
Thermal Overload Relays	20
Contactor Relays	21
Optional Units	23
International Standard	28
Type Codes	32
Order Procedure	34
Outline Drawing	36
Warranty and Safety	44
Information of Our FA-related Products	50


Desire to down-size the switchboard



Desire to reduce the types and stock of switchboard parts



Desire to prevent accidents such as electric shock

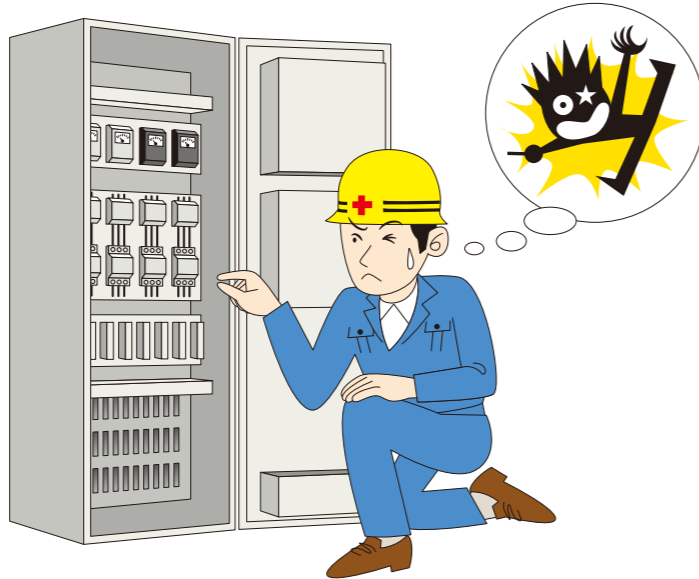

Do these requirements sound familiar?

The new MS-T Series can help you solve these issues.



- Small Down-sizing
- Standardization Standardization
- Safety & Quality Safety & Quality
- Smart Wiring Smart wiring
- Global Standard Global Standard




# Down-sizing Small

## 10A frame model is over 16% smaller with a width of just 36mm!!

There is a saying that "every bit helps" and now with the industries smallest\* general purpose Magnetic Contactor in its class, customers are able to more easily down-size their boards than ever before.

\*based on a survey of 10A frame class Magnetic Contactors conducted for Mitsubishi Electric September 2012

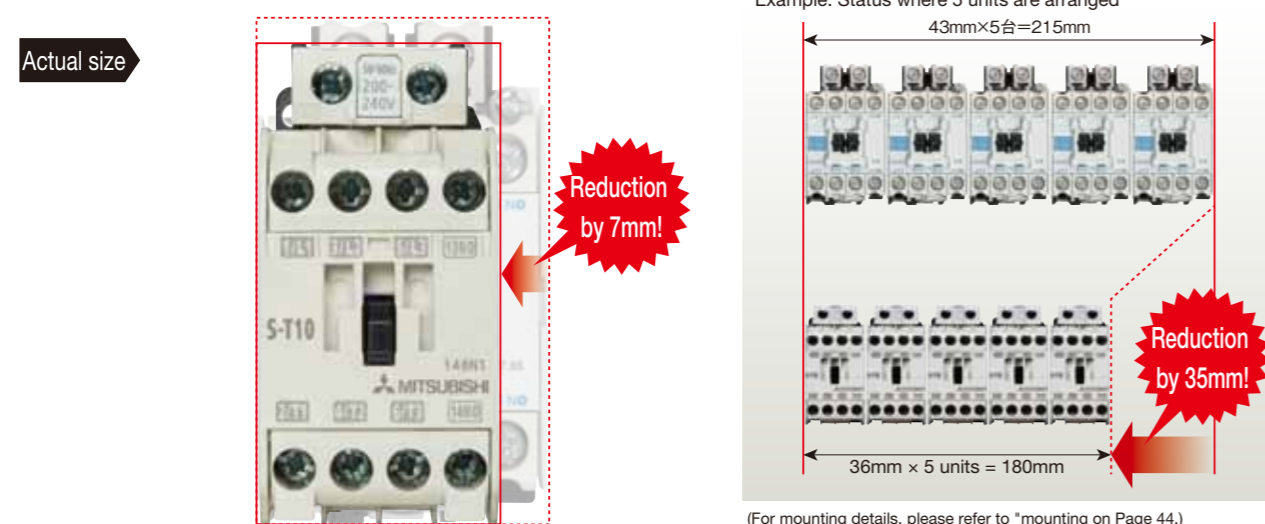

〈交流操作形〉

Frame size	11A	13A	20A	25A	32A
Traditional MS-N Series	43 S-N10	43 S-N11 (Auxiliary 1-pole) 53 S-N12 (Auxiliary 2-pole)	63 S-N20	75 S-N25	なし
New slimline MS-T Series	36 S-T10 (-7mm!)	43 S-T12 (Auxiliary 2-pole) (-10mm!)	43 S-T20 (-20mm!)	63 S-T25 (-12mm!)	43 S-T32 (NEW)


〈直流操作形〉

Front view	13A	18A	20A	32A
Traditional SD-N Series	43 SD-N11 53 SD-N12	なし	63 SD-N21	なし
New slimline SD-T Series	43 SD-T12 (-10mm!)	43 SD-T20 (NEW)	63 SD-T21	43 SD-T32 (NEW)

# Standardization Standardization

## New integrated terminal covers

The perennial issues of remembering to order the terminal covers, fitting them correctly or losing them in the process are challenges of the past. The integrated terminal cover system means they are always there, on the Magnetic Contactor or its Auxiliary contact, ready to be used.

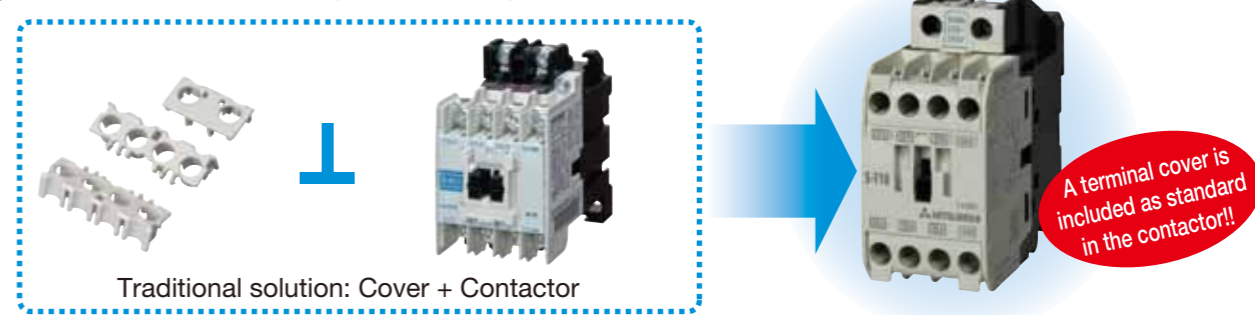

## Reduce your coil inventory by up to 50%

The new ST series has new wide range operating coils which mean 50% fewer variations are required to span the 24-550V voltage range compared to the previous SN series. This means a smaller stock burden for those users who hold main stock or spare parts.

Coil designation	Rated voltage [V]	
	50Hz	60Hz
AC12V	12	12
AC24V	24	24
AC48V	48—50	48—50
AC100V	100	100—110
AC120V	110—120	115—120
AC127V	125—127	127
AC200V	200	200—220
AC230V	220—240	230—240
AC260V	240—260	260—280
AC380V	346—380	380
AC400V	380—415	400—440
AC440V	415—440	460—480
AC500V	500	500—550

Coil designation	Rated voltage [V]
	50Hz/60Hz
AC24V	24
AC48V	48—50
AC100V	100—127
AC200V	200—240
AC300V	260—300
AC400V	380—440
AC500V	460—550

\* 12VAC type is an order-made product.

## A tough product for tough environments - as standard


Tropicalization treatment, anti-corrosion treatment and low temperature-response capabilities are now standard in the S-T type Magnetic Contactor range, so our customers do not need to worry about which version they are ordering. (note MSO-T and TH-T Magnetic Starters and thermal overloads have anti-corrosive treatment only)

## Low power consumption

高効率有極電磁石の採用により、コイル消費電力の大幅な低減を実現。

	従来形	新形	低減率
13Aフレーム (コイル:DC12/24V)*	7W	2.2W	69%
20Aフレーム (コイル:DC12/24V)	9W	2.2W	76%
32Aフレーム (コイル:DC12/24V)	-	2.2W	-

\*DC48V~220Vの消費電力は3.3Wです。

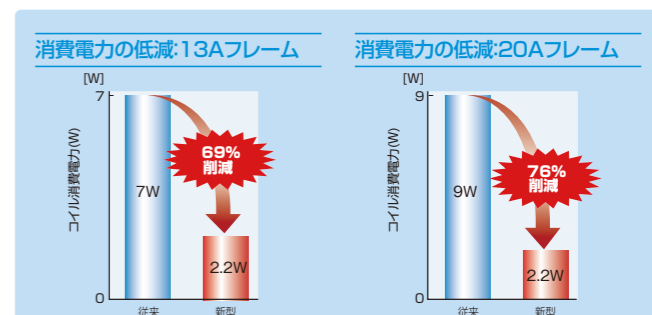

MS-T Series Introduction  
Application to Thermal Overload Relay  
Selection and Application  
Product Introduction  
Overseas Standard  
Type Codes  
Order Procedure  
Outline Drawing  
Warranty and Safety

Safety & Quality

# Safety & Quality

## No touch safety

The integrated terminal covers offer various benefits not to mention added protection against electric shock through secure finger protection. This is available not only on Magnetic Contactors but also Thermal Overload Relays, Contactor Relays and Auxiliary Contact Units.

MS-T Series complies with DIN EN 50274/VDE 0660 Teil 514 for "Finger safe (prevention of finger contact)"



## A light touch

The MS-T Series' auxiliary contacts can operate with load as light as 20V 3mA making it suitable for direct control/operation from a PLC output.



Smart wiring

# Smart Wiring

## Smart design means Smart wiring

The integrated terminal covers have an additional benefit in that they act as a guide to improve wiring efficiency but also retain the terminal screw in place: no mislaying the screw, no dropping it or having trouble reinserting it in to the terminal block just fast efficient wiring. Fast wiring terminals (model name with suffix "BC") are also available to further improve wiring efficiency, workability and hence productivity.



Easy wiring!

① Screw holder lifts up the screw.

② Insert a ring crimp lug

③ Tighten the screw

## Easy branch circuit wiring with Motor Circuit Breaker and optional connection conductor unit

Easy wiring is available for the new MS-T Series by using the Motor Circuit Breaker and optional connection conductor unit, contributing your productivity improvement.



Global Standard

# Global Standard

## Your confidence: Certified

Many customers are engaged in business which can mean them exporting to countries around the world and therefore having to comply with those local standards. The MS-T Series is certified to the highest international levels while work is ongoing to gain other country and shipping standards to help put your "mind at rest".


Standards	Applicable standard				Safety certification standard
	International	Japan	European countries		China
	IEC <sup>Note</sup>	JIS	EN	Certificate authority	GB
				EC directive	TÜV Rheinland
					U.S. & Canada
					cULus

Note : Also compliant with the requirements for mirror contacts comply with IEC60947-4-1 Annex F.

## Higher SCCR value achieved by using with Motor Circuit Breaker

When the MMP-T Series and the MS-T Series are used together, the higher SCCR (UL short-circuit current rating) value, can be achieved. That will be a great support for your business in North America.

\* Refer to page 28 for the SCCR values for the Magnetic Contactor and Thermal Overload Relays. For details on the SCCR value when used in combination with the Motor Circuit Breaker, refer to the Motor Circuit Breaker catalog.

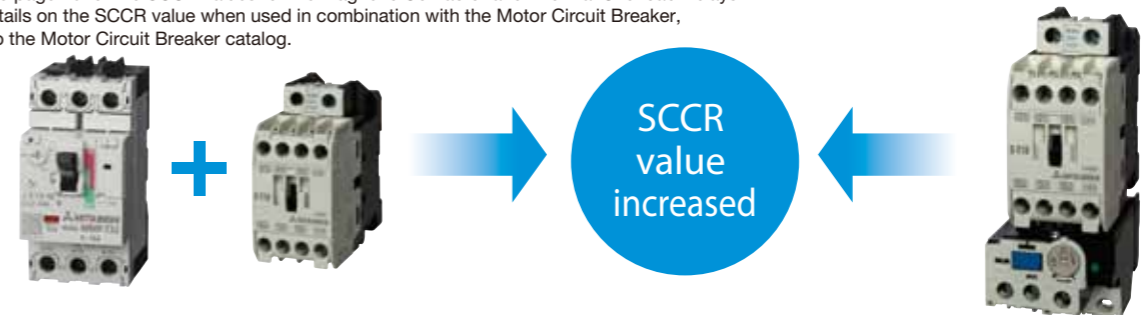





## List of Produced Models

### Thermal Overload Relays

Frame		T18	T25	N12	N18	N20	N20TA	N60	N60TA	N120	N120TA	N220	N400	N600
Heater designation		0.12~15	0.24~22	0.12~11	1.3~15	0.24~15	22~29	15~54	67~82	42~82	105~125	82~180	105~330	250~660
標準仕様	TH-□	○	○	○	○	○	○	○	○	○	○	○	○	○
飽和リアクトル付	TH-□SR	○	○	○	—	○	○	○	○	○	○	○	○	○
2素子 速動特性サーマル	TH-□FS	—	○	—	—	△	○	○	○	—	—	—	—	—
3素子(2E) サーマル	TH-□KP	○	○	○	△	○	○	○	○	○	○	○	○	○
3素子(2E)サーマル 飽和リアクトル付	TH-□KPSR	—	○	—	—	○	○	○	○	○	○	○	○	○
3素子(2E)速動特性 サーマル	TH-□FSKP	○	○	—	—	—	—	—	—	—	—	—	—	—
	TH-□KF	—	—	△	—	△	△	△	△	—	—	—	—	—
端子カバー付	TH-□CX	—	—	○	△	○	○	△	△	—	—	—	—	—
配線合理化端子	TH-□BC	○	○	—	—	—	—	—	—	—	—	—	—	—
防食処理	TH-□YS	○	○	○	○	○	○	○	○	○	○	○	○	○

注1: ○印は標準品、○印は標準品、△印は特殊品、◇印は順次発売、—印は製作範囲外を示します。

### Contactors Relays

フレーム		T5	T9	N4	N4TM	N5	N8	N8TM
接点数		5	9	4	4	5	8	8
接点構成		5a 4a1b 3a2b	9a 7a2b 5a4b	4a 3a1b 2a2b	— 3a1b	5a 4a1b 3a3b 2a3b	8a 7a1b 6a2b 5a3b 4a4b	— 5a3b 4a4b
標準形	SR-□	○	○	○	○	○	○	○
直流操作形	SRD-□	○	○	○	○	○	○	○
機械ラッチ式	SRL-□ SRLD-□	○	—	○	—	—	—	—
大容量接点付	SR-□JH SRD-□JH	○	○	○	○	○	○	○
オーバラップ接点付	SR-□LC SRD-□LC	○	○	○	—	○	○	—
遅延解放形	SR-□DL	○	○	○	—	—	○	—
配線合理化端子付	SR-□BC SRD-□BC	○	○	—	—	—	—	—
端子カバー付	SR-□CX SRD-□CX	—	—	○	○	○	○	○
サージ吸収器(バリスタ)付	SR-□SA SRD-□SA	○	○	○	○	○	○	○

### Magnetic Starters/Magnetic Contactors (Reversing)

Frame		T10	T12	T20	T21	T25	T32	
Applicable standard		IEC60947-4-1, EN60947-4-1, JIS C8201-4-1, GB14048.4						
Model name	Magnetic Contactors (Without Thermal Overload Relays, Open type)	Non-Reversing	S-T10	S-T12	S-T20	S-T21	S-T25	S-T32
		Reversing	S-2xT10	S-2xT12	S-2xT20	S-2xT21	S-2xT25	S-2xT32
	Magnetic Starters (With standard 2-element, With Thermal Overload Relays)	Enclosed	Non-Reversing	MS-T10	MS-T12	—	MS-T21	—
			Reversing	—	—	—	MS-2xT21	—
	Open type	Non-Reversing	MSO-T10	MSO-T12	MSO-T20	MSO-T21	MSO-T25	—
		Reversing	MSO-2xT10	MSO-2xT12	MSO-2xT20	MSO-2xT21	MSO-2xT25	—
Combined Thermal Overload Relays		TH-T18			TH-T25			
Magnetic Starters (With 3-element type Thermal Overload Relays)	Open type	Non-Reversing	MSO-T10KP	MSO-T12KP	MSO-T20KP	MSO-T21KP	MSO-T25KP	—
		Reversing	MSO-2xT10KP	MSO-2xT12KP	MSO-2xT20KP	MSO-2xT21KP	MSO-2xT25KP	—
Combined Thermal Overload Relays		TH-T18KP			TH-T25KP			
Rated insulation voltage [V]		690						
Rated impulse withstand voltage [kV]		6						
Rated frequency [Hz]		50/60						
Pollution degree		3						
Main contact rating	Rated operational current / power Category AC-3 (Three-phase squirrel-cage motor load standard responsibility) (Note 1) [kW/A]	220 to 240VAC	2.5/11	3.5/13	4.5/18	5.5/25	7.5/30(7.5/26)	7.5/32
		380 to 440VAC	4/9	5.5/12	7.5/18	11/23	15/30(15/26)	15/32
	500VAC	4/7	5.5/9	7.5/17	11/17	15/24	15/24	
	690VAC	4/5	5.5/7	7.5/9	7.5/9	11/12	11/12	
	Rated operational current / power Category AC-4 (Three-phase squirrel-cage motor load inching responsibility) [kW/A]	220 to 240VAC	1.5/8	2.2/11	3.7/18	3.7/18	4.5/20	5.5/26
		380 to 440VAC	2.2/6	4/9	5.5/13	5.5/13	7.5/17	11/24
	500VAC	2.7/6	5.5/9	5.5/10	5.5/10	7.5/12	7.5/13	
	Rated operational current / power Category AC-1 (Resistance, heater load)	100 to 240VAC	20	20	20	32	32	32
		380 to 440VAC	11	13	13	32	32	32
	Conventional free air thermal current Ith [A]		20	20	20	32	32	32
Minimum applicable load level		48V 200mA						
Auxiliary contact rating	Contact arrangement	Standard accessory	Non-Reversing	1a	1a1b	2a2b	—	
			Reversing (Note 3, Note 5)	1a×2+2b	1a1b×2+2b	2a2b×2	—	
		Special accessory	Non-Reversing	1b	2a	—	—	
			Reversing (Note 3, Note 5)	1b×2+2b	2a×2+2b	—	—	
	Max. number of additional options (Note 4)	UT-AX2/4	Non-Reversing	1				
			Reversing	2				
	UT-AX11	Non-Reversing	2					
		Reversing	2					
	Rated operational current (Category AC-15 : Alternating current coil load)		120VAC	6				
			240VAC	3				
Rated operational current (Category DC-13 : Direct current coil load)		24VDC	3					
		110VDC	0.6					
Conventional free air thermal current Ith [A]		10						
Minimum applicable load level		20V 3mA						
Mechanical durability (ten thousand times)		1000						
Performance	Electrical durability (ten thousand times)	Category AC-3	Please refer to the Electrical durability curve on Page 13					
		Category AC-4	Please refer to the Electrical durability curve on Page 13					
	Category AC-1	50						
Switching frequency (time/hour)	Category AC-3	1800						
	Category AC-4	300						
	Category AC-1	1200						
Characteristic	Coil consumption (Note 6)	Inrush [VA]	45		75		55	
		Sealed [VA]	7		6		4.5	
Power consumption (Note 6) [W]		2.2		2.4		1.8		
Outside dimensions	Magnetic Contactors (without Thermal Overload Relays) (Width x Height x Depth) [mm]	Non-Reversing	36×75×78	43×75×78		63×81×81	43×81×81	
		Reversing	82×85×78	97×85×78		136×81×81	96×81×111	
	Open type Magnetic Starters (Width x Height x Depth) [mm]	Non-Reversing	45×115×79					
		Reversing	90×125×79	97×125×79		136×138×82		
Enclosed Magnetic Starters (Width x Height x Depth) [mm]	Non-Reversing	76×165×97.5		—		104×176×110	—	
	Reversing	—		—		220×192×115	—	
IEC 35mm rail mounting		Possible (excluding Enclosed Magnetic Starters)						

Note 1: The content within ( ) of rated capacity and rated operational current is applied to the Magnetic Starter.

Note 2: Coil surge absorber-mounted type (□-□ SA type) is also manufactured. UT-SA21 type is mounted.

Note 3: +2b of T10 and T12 auxiliary contact arrangements in Reversing type represents b contact built in the UT-ML11 interlock unit.

Note 4: The main unit and auxiliary contact block must be prepared separately and additionally mounted by the user.

Note 5: For auxiliary contact arrangement in Reversing type, X2 is displayed as combined auxiliary contact arrangement of two Magnetic Contactors. Please specify the contact arrangement for which two main units are combined must be designated. <Designation example> In case of 1b x 2 + 2b: 2B

Note 6: Operational coil input and coil consumption are average values in case of applying 220V60Hz to AC200V coil.

Note 7: Refer to pages 24 to 26 for the mountable options.

## Specification List Table

### Magnetic Starters/Magnetic Contactors

Frame		T12	T20	T21	T32	
Applicable standard		JIS C8201-4-1, IEC60947-4-1, EN60947-4-1, GB14048.4				
形名	Magnetic Contactors (Without Thermal Overload Relays, Open type)	Non-Reversing	SD-T12	SD-T20	SD-T21	SD-T32
		Reversing	SD-2×T12	SD-2×T20	SD-2×T21	SD-2×T32
	Magnetic Starters (With standard 2-element, With Thermal Overload Relays)	Open type	MSOD-T12	MSOD-T20	MSOD-T21	—
		Combined Thermal Overload Relays	MSOD-2×T12	MSOD-2×T20	MSOD-2×T21	—
主接点 定格	電磁開閉器 (2E式サーマルリレー付)	Open type	MSOD-T12KP	MSOD-T20KP	MSOD-T21KP	—
		Combined Thermal Overload Relays	MSOD-2×T12KP	MSOD-2×T20KP	MSOD-2×T21KP	—
			TH-T18	TH-T25	—	—
			TH-T18KP	TH-T25KP	—	—
定格絶縁電圧 [V]		690				
定格インパルス耐電圧 [kV]		6				
定格周波数 [Hz]		50/60				
汚染度		3				
主接点 定格	AC-3級 (三相かご形モータ負荷標準責務) (注1)	AC200~220V	2.7/13	3.7/18	4/18 (20)	7.5/32
		AC380~440V	4/9	7.5/18	7.5/18 (20)	15/32
	[kW/A]		AC500~550V	5.5/9	7.5/17	11/20
	AC-4級 (三相かご形モータ負荷インテグレーション責務)	AC200~220V	2.2/11	3.7/18	—	5.5/26
		AC380~440V	4/9	5.5/13	—	11/24
	[kW/A]		AC500~550V	5.5/9	5.5/10	7.5/13
	AC-1級 (抵抗、ヒータ負荷)		AC100~240V	20	—	32
			AC380~440V	13	—	32
	開放熱電流 Ith [A]		20			
	最小適用負荷レベル		48V 200mA			
補助接点 定格	標準付属	非可逆	1a1b	2a2b	—	—
		可逆 (注3, 注5)	1a1b×2+2b	2a2b×2	—	2a2b×2
	特殊付属	非可逆	2a	—	—	—
		可逆 (注3, 注5)	2a×2+2b	—	—	—
	オプション追加 最大個数 (注4)	UT-AX2/4	非可逆	1	—	—
		UT-AX11	可逆	2	—	—
	定格使用電流 (AC-15級: 交流コイル負荷)		AC120V	6	—	—
			AC240V	3	—	—
	定格使用電流 (DC-13級: 直流コイル負荷)		DC24V	3	—	—
			DC110V	0.6	—	—
開放熱電流 Ith [A]		10				
最小適用負荷レベル		20V 3mA				
機械的耐久性 [万回]		1000				
性能	電氣的 耐久性 [万回]	AC-3級	P19の電氣的耐久性曲線を参照			
		AC-4級	P19の電氣的耐久性曲線を参照			
	開閉頻度 [回/時]	AC-3級	50			
		AC-4級	1800			
特性	消費電力 (注6) [W]	AC-3級	3.3 (2.2)			
		AC-4級	2.4			
外形寸法	電磁接触器 (サーマルリレーなし) (幅×縦×奥行) [mm]	非可逆	43×75×100	63×81×108	43×81×108	
		可逆	97×85×100	136×81×108	96×81×138	
	開放形電磁開閉器 (幅×縦×奥行) [mm]	非可逆	45×115×101	63×128×109	—	
		可逆	97×125×101	136×138×115	—	
IEC35mmレール取付		可能				

注1: 定格使用電流の( )内は電磁接触器 (サーマルリレーなし) に適用します。  
 注2: コイルサージ吸収器取付形 (□-□SA形) も製作できます。UT-SA21形が取付きます。  
 注3: 可逆式におけるT10, T12, T20補助接点構成の+2bは、UT-ML11インターロックユニット内蔵のb接点を示します。ご注文時の指定は不要です。  
 注4: 本体と補助接点ユニットは別手配頂きお客様において追加取付願います。  
 注5: 可逆式における補助接点構成は、×2として電磁接触器2台の補助接点構成組合せで表示しています。接点構成が標準の場合、ご注文時の指定は不要ですが、特殊の場合には本体2台分をあわせた接点構成で指定願います。<指定例>1b×2+2bの時: 2B  
 注6: 操作コイル入力、消費電力はAC200Vコイルに220V60Hz印加した場合の平均値です。  
 注7: 取付け可能なオプションは30~34ページを参照下さい。  
 注8: 上表はDC100Vコイルにおける特性の目安値を示します。SD-T12~T32の( )内はDC12VおよびDC24Vコイルにおける特性の目安値を示します。

### Making and Breaking capacities

Frame	T10	T12	T20	T21	T25	T32
Making capacity	220 to 240VAC	110	130	180	250	320
Category AC-3 [A]	380 to 440VAC	90	120	180	230	320
	500VAC	70	90	170	170	240
Breaking capacity Category AC-4 [A]	220 to 240VAC	88	104	144	200	256
	380 to 440VAC	72	96	144	184	256
	500VAC	56	72	136	136	192


Note 1: Open/close frequency of closed circuit current capacity and breaking current capacity is 50 respectively (IEC60947-4-1).

### Coordination with short-circuit protective devices


Magnetic Contactors model		S-T10	S-T12	S-T20	S-T21	S-T25	S-T32	SR-T5/T9
Type 1	Short-circuit protective device rating	40A			80A			—
	* Fuse gG (IEC60269-1/2)	10A			—			10A
	Main circuit							
	Auxiliary circuit							

### Electrical Durability Curve

#### ● Main circuit voltage 220 to 240VAC

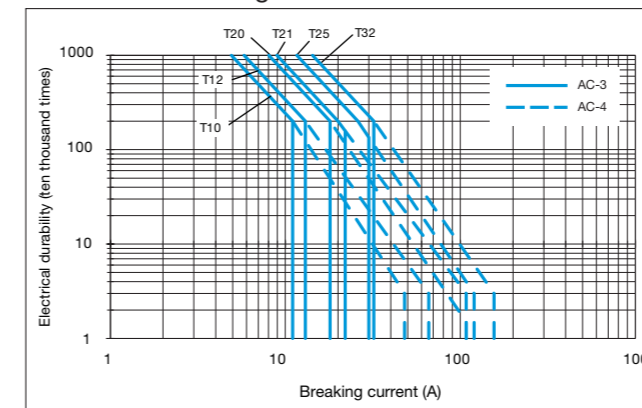

#### ● Main circuit voltage 380 to 440VAC

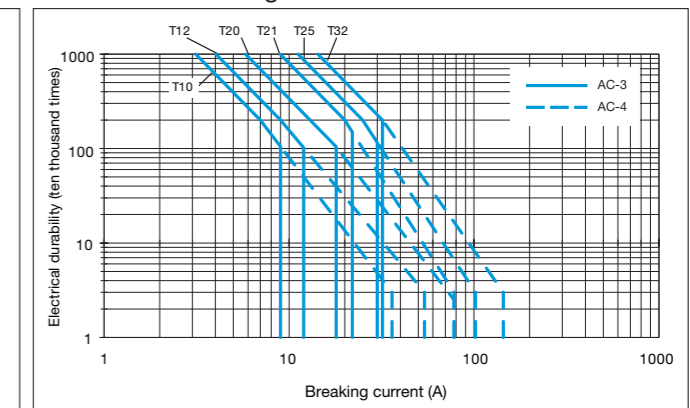

### Coil Ratings

#### Coil types and ratings (Alternating voltage operation type)

##### ● For S-T10 to T32 types For SR-T5 and T9 types

Coil designation	Rated voltage [V]	Marking on the equipment
	50Hz/60Hz	
AC24V	24	Rated voltage and frequency
AC48V	48-50	
AC100V	100-127	
AC200V	200-240	
AC300V	260-300	
AC400V	380-440	
AC500V	460-550	

Note: Even when the single rating (example: 200V60Hz) is specified for an order, the above rating voltage is indicated on the product.

##### ● For S-T10SA to T32SA types For SR-T5SA and T9SA types

Coil designation	Rated voltage [V]	Coil indication	Varistor voltage [V]
	50Hz/60Hz		
AC24V	24	Rated voltage and frequency	120
AC48V	48-50		120
AC100V	100-127		470
AC200V	200-240		470
AC300V	260-300		910
AC400V	380-440		910

Note 1: Add "SA" to the end of the type name to order the operation coil surge absorber mounting type (varistor).

Example: S-T10SA AC100V  
 Note 2: Even when the single rating (example: 200V60Hz) is specified for an order, the above rating voltage is indicated on the product.



● For SD-T12 to T32 types  
For SRD-T5 and T9 types

Coil designation	Rated voltage	Coil indication
DC12V	DC12V	Rated voltage
DC24V	DC24V	
DC48V	DC48V	
DC100V	DC100V	
DC110V	DC110V	
DC125V	DC120-DC125V	
DC200V	DC200V	
DC220V	DC220V	

注1. 操作コイル端子には極性があります。端子番号A1 (+) にプラス、A2 (-) にマイナス側を接続してください。  
注2. 操作電源が整流器の場合、直流側でコイルを開閉してください。

● For SD-T12 to T32SA types  
For SRD-T5SA and T9SA types

Coil designation	Rated voltage	Coil indication	Varistor voltage[V]
DC12V	DC12V	Rated voltage	47
DC24V	DC24V		47
DC48V	DC48V		120
DC100V	DC100V		470
DC110V	DC110V		470
DC125V	DC120-125V		470
DC200V	DC200V		470
DC220V	DC220V		470

注1. 操作コイル用サージ吸収器取付形 (バリスタ) をご要求の際は形名末尾に「SA」を付加してご注文ください。例: SD-T21SA DC100V  
注2. 操作コイル端子には極性があります。端子番号A1 (+) にプラス、A2 (-) にマイナス側を接続してください。  
注3. 上記以外は製作できません。

### Contact Reliability

#### Contact reliability of main and auxiliary contacts

The minimum working voltage and current of the main and auxiliary contacts of the S-T type Magnetic Contactors and the contact of the SR-T type Contactor Relays vary depending on the allowable failure rate. Apply the following diagrams.

■ The contact reliability reduces when a contact is connected in series or when the current is applied and broken at the time of opening and closing the contact.

Prescribe remedies such as connecting the contact in parallel (providing redundancy).

■ The contact must be connected in parallel (providing redundancy) if reliability greater than the contact reliability shown the diagrams 1 to 3 is required.

● Magnetic Contactors

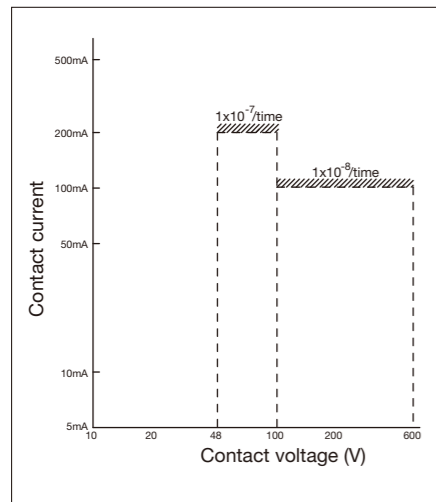


Diagram 1. S(D)-T main contact

● Contactor Relays

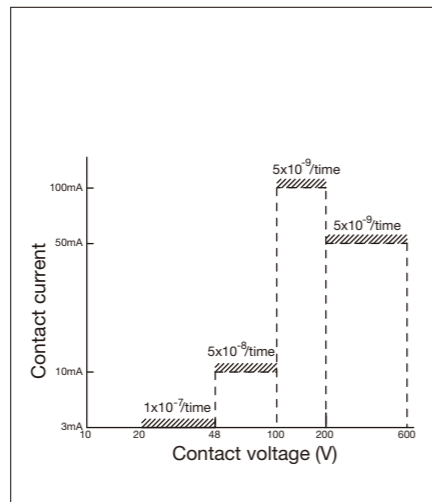


Diagram 2. S(D)-T auxiliary contact

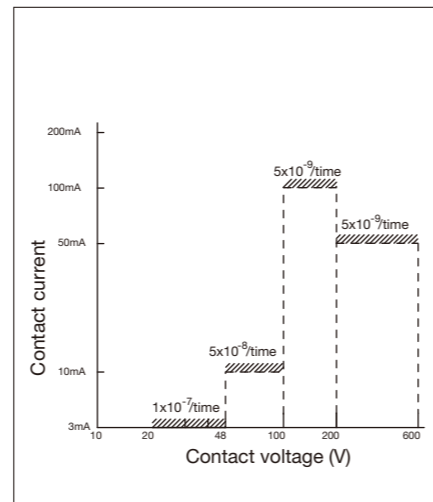


Diagram 3. SR(D)-T5, T9, UT-Ax4

Note 1: The contact reliability indicates the failure rate  $\lambda$  60 (the number of failures/the number of opening and closing operations, per contact) at 60% reliability standard. This reliability is applied when the product is in use under a clean atmosphere in the standard specification environment (Refer to page 44).  
Note 2: The contact resistance of the contacts may change due to economical corrosion and that may affect the contacts in the case of a light load. It is recommended that regular inspections to be conducted, with load opening and closing performed several times in the inspection, and that consideration be provided on the system side.

### Specification List

### Thermal Overload Relays

#### Model list

Frame		T18	T25		
Appearance					
	Model name	TH-T18	TH-T25		
with 2-elements	For Magnetic Starters	-	TH-T25KP		
	For independent mounting	TH-T18KP	-		
with 3-elements	For Magnetic Starters	-	TH-T25KP		
	For independent mounting	-	-		
Outside dimensions [mm] W×H×D	For Magnetic Starters	45×55×76.5	63×51×79		
	For independent mounting	-	-		
Product weight [kg]	For Magnetic Starters	0.11	0.16		
	For independent mounting	-	-		
Applicable standard		IEC60947-4-1, EN60947-4-1, JIS C8201-4-1, GB14048.4			
Use condition	Ambient temperature [°C]	-10 to +40 (Standard: 20°C; maximum temperature on the board: 55°C)			
	Frequency [Hz]	0(DC) to 400			
Rated insulation voltage [V]		690			
Rated impulse withstand voltage [kV]		6			
Pollution degree		3			
Main circuit specifications	Heater designation (adjustable range of stabilized current) [A] (Rated operational voltage : 550V maximum)	0.12 (0.1 to 0.16)	2.1 (1.7 to 2.5)	0.24 (0.2 to 0.32)	2.5 (2 to 3)
		0.17 (0.14 to 0.22)	2.5 (2 to 3)	0.35 (0.28 to 0.42)	3.6 (2.8 to 4.4)
		0.24 (0.2 to 0.32)	3.6 (2.8 to 4.4)	0.5 (0.4 to 0.6)	5 (4 to 6)
		0.35 (0.28 to 0.42)	5 (4 to 6)	0.7 (0.55 to 0.85)	6.6 (5.2 to 8)
		0.5 (0.4 to 0.6)	6.6 (5.2 to 8)	0.9 (0.7 to 1.1)	9 (7 to 11)
		0.7 (0.55 to 0.85)	9 (7 to 11)	1.3 (1 to 1.6)	11 (9 to 13)
		0.9 (0.7 to 1.1)	11 (9 to 13)	1.7 (1.4 to 2)	15 (12 to 18)
		1.3 (1 to 1.6)	15 (12 to 18)	2.1 (1.7 to 2.5)	22 (18 to 26)
		1.7 (1.4 to 2)	-	-	-
		Power consumption [VA/element] at minimum/maximum stabilization		0.8 / 1.8	
Terminal screw size		M3.5			
Compatible with terminal	Electric wire size [mm <sup>2</sup> ]	φ 1.6, 0.75 to 2.5			
	Crimp lug size	1.25-3.5 to 2-3.5, 5.5-S3			
Contact arrangement		1a1b			
Conventional free air thermal current Ith [A]		2			
Rating	Category AC-15 (AC operated Magnetic Contactors) Coil opening and closing a contact/b contact Operational: The value in brackets indicates the rating for automatic reset.	24VAC	2(0.5) / 2(0.5)	2(0.5) / 3(0.5)	
		120VAC	2(0.5) / 2(0.5)	2(0.5) / 3(0.5)	
		240VAC	1(0.5) / 1(0.5)	1(0.5) / 2(0.5)	
		550VAC	0.3(0.3) / 0.3(0.3)	0.3(0.3) / 0.3(0.3)	
		Category DC-13 (DC operated Magnetic Contactors) Coil opening and closing Operational: The value in brackets indicates the rating for automatic reset.	24VDC	0.5(0.3)	1(0.3)
		110VDC	0.2(0.2)	0.2(0.2)	
Minimum applicable load level		20V 5mA			
Terminal screw size		M3.5			
Compatible with terminal	Electric wire size [mm <sup>2</sup> ]	φ 1.6, 0.75 to 2.5			
	Crimp lug size	1.25-3.5 to 2-3.5			
Trip class		10A			
Operating characteristic curve description page		Page 17			
Vibration resistance (vibration resistance malfunction performance)		10 to 55 Hz, 19.6 m/s <sup>2</sup>			
Characteristics/Functions	Trip-free	○	○		
	Reset method	Manual/Automatic switchable	Manual/Automatic switchable		
	Operation indication (lever indication)	○	○		
	Manual trip check	○	○		

Note 1: The ambient temperature compensator is mounted on all types.  
Note 2: ○ indicates standard equipment. ◯ : Already released.

Introduction  
Application to Thermal Overload Relays  
Product Introduction  
Overseas Standard  
Type Codes  
Order Procedure  
Outline Drawing  
Warranty and Safety

## Selection Table

Thermal Overload Relays

### Application to standard three-phase motor of Thermal Overload Relays

Thermal Overload Relays				Standard three-phase motor capacity [kW]		Magnetic Contactors that can be combined					
Heater designation (A)	Setting range (A)	Short-circuit protector rating (A) * Fuse gG (IEC60269-1/2)		Frame	200-220V	380-440V	TH-T18		TH-T25		
		Main circuit	Auxiliary circuit				S-T10	S(D)-T12	S(D)-T20	S(D)-T21	S-T25
0.12	0.1-0.16	2	6	TH-T18							
0.17	0.14-0.22	2	6								
0.24	0.2-0.32	2	6								
0.35	0.28-0.42	2	6								
0.5	0.4-0.6	2	6								
0.7	0.55-0.85	4	6								
0.9	0.7-1.1	4	6								
1.3	1.0-1.6	4	6								
1.7	1.4-2.0	6	6								
2.1	1.7-2.5	6	6								
2.5	2.0-3.0	10	6	TH-T25	0.03	0.05					
3.6	2.8-4.4	10	6		0.05	0.1					
5	4.0-6.0	16	6		0.07						
6.6	5.2-8.0	20	6		0.1	0.18					
9	7.0-11	20	6		0.2	0.25					
11	9.0-13	25	6		0.2	0.37, 0.55					
15	12-18	32	6		0.4	0.75					
22	18-26	50	6		0.75	1.5					
					1	2.2					
					1.5	3, 3.7					
				2.2	3, 3.7						
				3.7	5.5						
				5.5	7.5, 9						
					11						

## Precautions for Use

Thermal Overload Relays

### Disassembly

The Thermal Overload Relays are adjusted at the time of assembly. Do not disassemble it.

### Ambient temperature compensation

The TH-T type Thermal Overload Relays are adjusted with the Magnetic Starters in the standard box (the MS type) relative to the ambient temperature of 20°C (The temperature on the control board of the MSO type Magnetic Starters is 35°C). The ambient temperature compensator is mounted on the TH-T type Thermal Overload Relays. Therefore, the ambient temperature less affects the operational characteristic change. The minimum operating current change according to the ambient temperature change relative to the ambient temperature of 20°C (the temperature on the control board of 35°C) generally depends on the characteristics in the diagrams 1 and 2.

The Thermal Overload Relays have a characteristic that the operating current becomes high when the ambient temperature is low and becomes low when the ambient temperature is high. If the ambient temperature of the installation site is significantly different from 20°C (the temperature on the control board of 35°C), the setting current of the Thermal Overload Relays needs to be corrected as shown in diagrams 1 and 2. In addition, note that the compensation factor has a characteristic to be the minimum scale>middle scale>maximum scale at the adjustment knob location. (Note that the Thermal Overload Relays may operate at a current of less than 100% stabilized current if in use at temperatures exceeding the allowable working temperature of 40°C (55°C).)

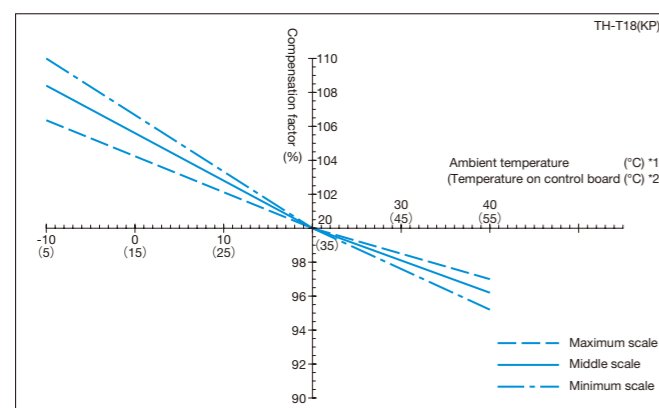


Diagram 1. Ambient temperature compensation curve (T18 frame)

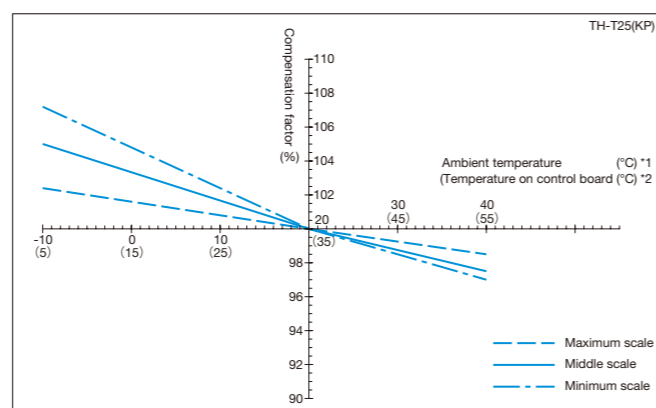


Diagram 2. Ambient temperature compensation curve (T25 frame)

Compensation factor: Percentage of the minimum operating current at the ambient temperature of 20°C (the temperature on the control board of 35°C)  
 <Compensation procedure of setting current>  
 Determine the compensation factor of the working ambient temperature according to the curves in diagrams 1 and 2 and use the value of all load currents of the motor divided by the determined compensation factor as the stabilization value.  
 Example: The ambient temperature compensation factor for TH-T25 at the ambient temperature of 40°C (the temperature on the control board of 55°C) is 97% at the minimum scale according to diagram 2. If the motor rated current is 15A, the stabilization value is 15.5A (=15/0.97).

Note 1: [\*1] The ambient temperature applied to the MS type indicates the outside temperature of the box.

[\*2] The temperature including temperature increase on the control board applied to the MSO type is indicated.

### Connecting electric wire size and operating current


The TH-T type adjusts the minimum operating current with the standard electric wire size shown in the following table. If the electric wire is thicker or thinner than this standard electric wire size, the operating current becomes high or low, respectively. Therefore, correct the stabilized current (divide it by the change rate of the minimum operating current) to use a size different from the standard connecting electric wire size.

Model name	Heater designation [A]	Standard electric wire size [mm <sup>2</sup> ]	Connecting electric wire size [mm <sup>2</sup> ]	Change rate of minimum operating current [%]
TH-T18(KP)	0.12 to 15	2	1.25	98
TH-T25(KP)	0.24 to 11		2.5	103
TH-T25(KP)	15,22	3.5	2	97
			6	104


## Operating Characteristic of Thermal Overload Relays (Ambient Temperature of 20°C) Thermal Overload Relays

For the information on the connecting electric wire size, refer to page 46.


### TH-T18, T18KP

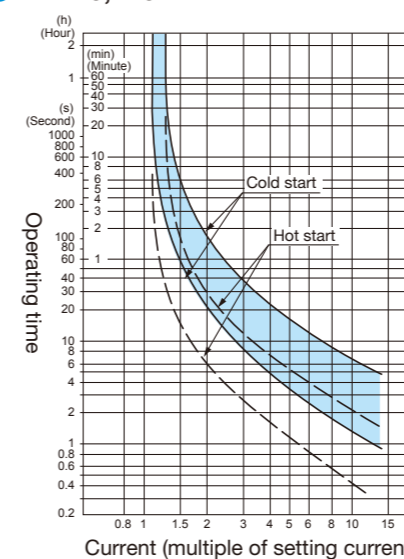


### TH-T25, T25KP

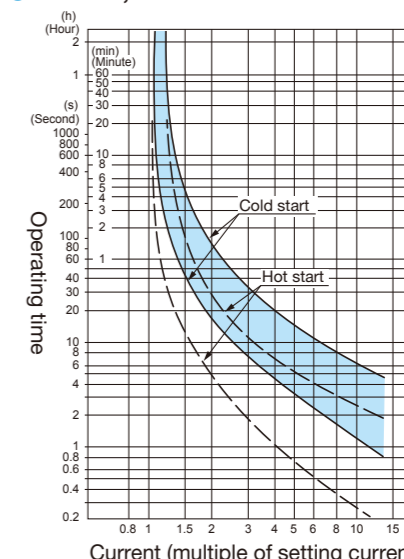


### TH-T18SR

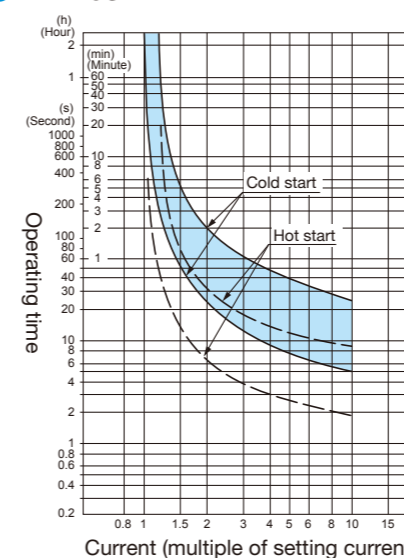


### TH-T25SR, T25KPSR

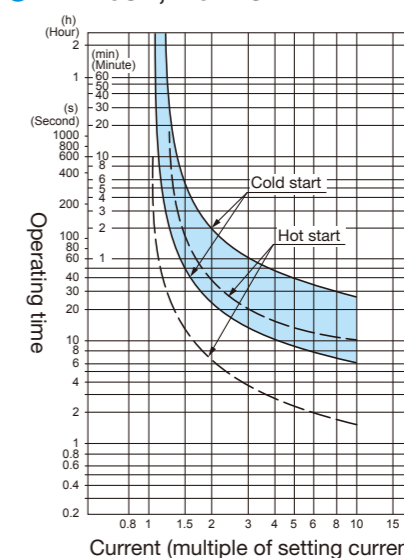

### TH-T18FSKP

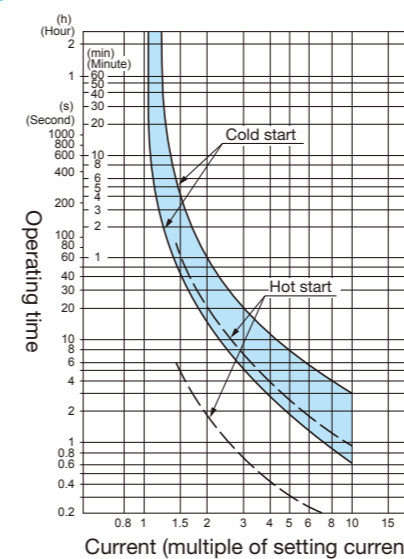


### TH-T25FSKP

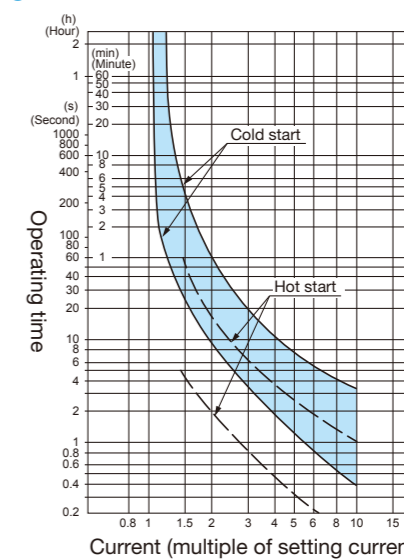




## Magnetic Starters

- MS-T series (non-Reversing) : Enclosed
- MS-2xT series (Reversing) : Enclosed

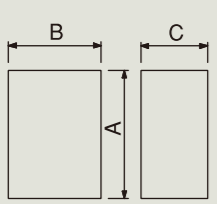Model name	Non-Reversing	MS-T10	MS-T12	MS-T21		
	Reversing	—	—	MS-2xT21		
Rated capacity (kW) Category AC-3	220 to 240VAC	2.5	3.5	4.5		
	380 to 440VAC	4	5.5	7.5		
	500VAC	4	5.5	7.5		
Heater rating (designation) of standard Thermal Overload Relays (A)	0.12 0.17 0.24 0.35 0.5 0.7 0.9 1.3	0.12 0.17 0.24 0.35 0.5 0.7 0.9 1.3	0.12 0.17 0.24 0.35 0.5 0.7 0.9 1.3	0.12 0.17 0.24 0.35 0.5 0.7 0.9 1.3		
	1.7 2.1 2.5 3.6 5 6.6 9	1.7 2.1 2.5 3.6 5 6.6 9 11	1.7 2.1 2.5 3.6 5 6.6 9 11	1.7 2.1 2.5 3.6 5 6.6 9 11 15		
Operation coil rating Refer to pages 13 and 14						
Auxiliary contact arrangement	Non-Reversing	Standard	1a	1a1b	2a2b	
		Special	1b	2a	—	
	Reversing	Standard	—	—	2a2bx2	
		Special	—	—	—	
	Non-Reversing	A	165	—	176	
		B	76	—	104	
		C	97.5	—	110	
	Reversing	A	—	—	—	192
		B	—	—	—	220
		C	—	—	—	115

- MSO-T series (non-Reversing) : Open type
- MSO-2xT series (Reversing) : Open type

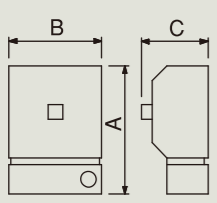Model name	Non-Reversing	MSO-T10	MSO(D)-T12	MSO(D)-T20	MSO(D)-T21	MSO-T25	
	Reversing	MSO-2xT10	MSO(D)-2xT12	MSO(D)-2xT20	MSO(D)-2xT21	MSO-2xT25	
Rated capacity (kW) Category AC-3	220 to 240VAC	2.5	3.5	4.5	5.5	7.5	
	380 to 440VAC	4	5.5	7.5	11	15	
	500VAC	4	5.5	7.5	11	15	
Heater rating (designation) of standard Thermal Overload Relays (A)	0.12 0.17 0.24 0.35 0.5 0.7 0.9 1.3	0.12 0.17 0.24 0.35 0.5 0.7 0.9 1.3	0.12 0.17 0.24 0.35 0.5 0.7 0.9 1.3	0.12 0.17 0.24 0.35 0.5 0.7 0.9 1.3	0.24 0.35 0.5 0.7 0.9 1.3 1.7 2.1	0.24 0.35 0.5 0.7 0.9 1.3 1.7 2.1	
	1.7 2.1 2.5 3.6 5 6.6 9	1.7 2.1 2.5 3.6 5 6.6 9 11	1.7 2.1 2.5 3.6 5 6.6 9 11	1.7 2.1 2.5 3.6 5 6.6 9 11 15	2.5 3.6 5 6.6 9 11 15 22	2.5 3.6 5 6.6 9 11 15 22	
Operation coil rating Refer to pages 13 and 14							
Auxiliary contact arrangement	Non-Reversing	Standard	1a	1a1b	1a1b	2a2b	2a2b
		Special	1b	2a	2a	—	—
	Reversing	Standard	1ax2+2b	1a1bx2+2b	1a1bx2+2b	2a2bx2	2a2bx2
		Special	1bx2+2b	2ax2+2b	2ax2+2b	—	—
	Non-Reversing	A	115	115	115	128	128
		B	45	45	45	63	63
		C	79	79	79	82	82
	Reversing	A	125	125	125	138	138
		B	90	97	97	136	136
		C	79	79	79	82	82
IEC 35mm rail mounting type							
Option	Front clip-on auxiliary contact block mounting type	←					→
	Side clip-on auxiliary contact block mounting type	←					→
	Surge absorber mounting type	←					→

## Thermal Overload Relays configuring the Magnetic Starters

Thermal Overload Relays models and heater types that configure Magnetic Starters

Magnetic Contactors frame	Thermal Overload Relays model	Heater designation (adjustable range of stabilized current) (A)
T10, T12, T20	TH-T18	0.12(0.1 to 0.16) 0.17(0.14 to 0.22) 0.24 (0.2 to 0.32) 0.35(0.28 to 0.42) 0.5(0.4 to 0.6) 0.7(0.55 to 0.85) 0.9(0.7 to 1.1) 1.3(1 to 1.6) 1.7(1.4 to 2) 2.1(1.7 to 2.5) 2.5(2 to 3) 3.6(2.8 to 4.4) 5(4 to 6) 6.6(5.2 to 8) 9(7 to 11) 11(9 to 13)* 15(12 to 18)*
T21, T25	TH-T25 <sup>Note 3</sup>	0.24(0.2 to 0.32) 0.35(0.28 to 0.42) 0.5(0.4 to 0.6) 0.7(0.55 to 0.85) 0.9(0.7 to 1.1) 1.3(1 to 1.6) 1.7(1.4 to 2) 2.1(1.7 to 2.5) 2.5(2 to 3) 3.6(2.8 to 4.4) 5(4 to 6) 6.6(5.2 to 8) 9(7 to 11) 11(9 to 13) 15(12 to 18) 22(18 to 26)*


Note 1: Select the value closer to the heater designation if the stabilized current has two values.

Note 2: Heater designation marked with \* has Magnetic Starters frames that cannot be applied. For information on the applicable Magnetic Starters frames, refer to the "Heater rating (designation) of standard Thermal Overload Relays" field in the above table.

Note 3: The connection conductor kit UN-TH21 is required to use in combination with the Magnetic Contactor to make a Magnetic Starters.

## Magnetic Contactors

- S-T series (non-Reversing)
- S-2xT series (Reversing)

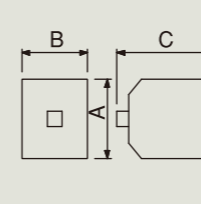Model name	Non-Reversing	S-T10	S(D)-T12	S(D)-T20	S(D)-T21	S-T25	S(D)-T32	
	Reversing	S-2xT10	S(D)-2xT12	S(D)-2xT20	S(D)-2xT21	S-2xT25	S(D)-2xT32	
Rated operational current (A) Category AC-3	220 to 240VAC	11	13	18	25	30	32	
	380 to 440VAC	9	12	18	23	30	32	
	500 VAC	7	9	17	17	24	24	
Conventional free air thermal current Ith (A)		20	20	20	32	32	32	
Operation coil rating Refer to pages 13 and 14								
Auxiliary contact arrangement	Non-Reversing	Standard	1a	1a1b	1a1b	2a2b	—	
		Special	1b	2a	2a	—	—	
	Reversing	Standard	1ax2+2b	1a1bx2+2b	1a1bx2+2b	2a2bx2	2a2bx2	—
		Special	1bx2+2b	2bx2+2b	2bx2+2b	—	—	—
	Non-Reversing	A	75	75	75	81	81	
		B	36	43	43	63	63	
		C	78	78	78	81	81	
	Reversing	A	85	85	85	81	81	
		B	82	97	97	136	136	
		C	78	78	78	81	111	
IEC 35mm rail mounting type								
Option	Front clip-on auxiliary contact block mounting type	←						→
	Side clip-on auxiliary contact block mounting type	←						→
	Surge absorber mounting type	←						→

## Thermal Overload Relays

### TH-T series

Model name	TH-T18	TH-T25
Application	MSO-T10 MSOD-T12 -T12 -T20 -T20	MSO-T21 MSO-T21 -T25
Standard heater rating (designation) (A)	0.12, 0.17, 0.24, 0.35, 0.5, 0.7, 0.9, 1.3, 1.7, 2.1, 2.5, 3.6, 5, 6.6, 9, 11, 15	0.24, 0.35, 0.5, 0.7, 0.9, 1.3, 1.7, 2.1, 2.5, 3.6, 5, 6.6, 9, 11, 15, 22
Contact arrangement	1a1b	1a1b
	A	55
	B	45
	C	76.5

### Heater types

Heater types of TH type Thermal Overload Relays

機種	For Magnetic Starters		For single mounting		Heater designation (adjustable range of stabilized current) (A)
	2-element	3-element	2-element	3-element	
Standard	T18	T18KP	— Note 1	— Note 1	0.12(0.1 to 0.16) 0.17(0.14 to 0.22) 0.24 (0.2 to 0.32) 0.35(0.28 to 0.42) 0.5(0.4 to 0.6) 0.7(0.55 to 0.85) 0.9(0.7 to 1.1) 1.3 (1 to 1.6) 1.7(1.4 to 2) 2.1(1.7 to 2.5) 2.5(2 to 3) 3.6(2.8 to 4.4) 5(4 to 6) 6.6(5.2 to 8) 9(7 to 11) 11(9 to 13) 15(12 to 18)
	T25	T25KP	T25 Note 1	T25KP Note 1	0.24(0.2 to 0.32) 0.35(0.28 to 0.42) 0.5(0.4 to 0.6) 0.7(0.55 to 0.85) 0.9(0.7 to 1.1) 1.3(1 to 1.6) 1.7(1.4 to 2) 2.1(1.7 to 2.5) 2.5(2 to 3) 3.6(2.8 to 4.4) 5(4 to 6) 6.6(5.2 to 8) 9(7 to 11) 11(9 to 13) 15(12 to 18) 22(18 to 26)
Quick trip type	—	T18FSKP	— Note 1	— Note 1	2.1(1.7 to 2.5) 3.6(2.8 to 4.4) 5(4 to 6) 6.6(5.2 to 8) 9(7 to 11) 11(9 to 13) 15(12 to 18)
	T25FS	T25FSKP	T25FS	T25FSKP	2.1(1.7 to 2.5) 3.6(2.8 to 4.4) 5(4 to 6) 6.6(5.2 to 8) 9(7 to 11) 11(9 to 13) 15(12 to 18) 22(18 to 26)
Delay trip type	T18SR	—	— Note 1	—	0.24(0.2 to 0.32) 0.35(0.28 to 0.42) 0.5(0.4 to 0.6) 0.7(0.55 to 0.85) 0.9(0.7 to 1.1) 1.3(1 to 1.6) 1.7(1.4 to 2) 2.1(1.7 to 2.5) 2.5(2 to 3) 3.6(2.8 to 4.4) 5(4 to 6) 6.6(5.2 to 8) 9(7 to 11) 11(9 to 13) 15(12 to 18)
	T25SR	T25KPSR	T25SR Note 1	T25KPSR Note 1	0.24(0.2 to 0.32) 0.35(0.28 to 0.42) 0.5(0.4 to 0.6) 0.7(0.55 to 0.85) 0.9(0.7 to 1.1) 1.3(1 to 1.6) 1.7(1.4 to 2) 2.1(1.7 to 2.5) 2.5(2 to 3) 3.6(2.8 to 4.4) 5(4 to 6) 6.6(5.2 to 8) 9(7 to 11) 11(9 to 13) 15(12 to 18) 22(18 to 26)

Note 1: Combining UT-HZ18 allows the T18 frame to be used singly (screw mounting or IEC 35 mm rail mounting).  
Combining UN-RM20 allows the T25 frame for single mounting to have the IEC 35mm rail mounted.

## Contactors Relays

### Specification List

Model name		SR-T5	SRD-T5	SR-T9	SRD-T9
Number of poles		5		9	
Contact arrangement		5a		9a	
		4a1b		7a2b	
		3a2b		5a4b	
Rated insulation voltage [V]		690			
Applicable standard		IEC60947-5-1, EN60947-5-1, JIS C8201-5-1, GB14048.5			
Rated impulse withstand voltage [kV]		6			
Rated frequency [Hz]		50/60			
Pollution degree		3			
Contact rating (Note 1)	AC rated operational current [A]	Category AC-15 (Coil load)	120VAC	6	
			240VAC	3	
		440VAC	1.5		
		550VAC	1.2		
	DC rated operational current [A]	Category AC-12 (resistive load)	120VAC	10	
			240VAC	8	
		440VAC	5		
		550VAC	5		
Category DC-13 (large coil load)	24VDC	3			
	48VDC	1.5			
Category DC-12 (resistive loads)	110VDC	0.6(2)			
	220VDC	0.3(0.8)			
Minimum applicable load level		20V 3mA			
Characteristic Performance	Mechanical durability [ten thousand times]		1,000		
	Electrical durability [ten thousand times]		50		
	Switching frequency [time/hour]		1,800		
Characteristic Performance	Coil consumption (Note 3)	Inrush [VA]	45		
		Sealed [VA]	7		
Optional unit (Note 2)	Power consumption (Note 3) [W]		2.2		
	Surge absorber unit		○		○
Additional auxiliary contact block		○		x	
IEC 35mm rail mounting		○		○	

Note 1: The value in brackets indicates the current when switching the load with two poles installed in series.

Note 2: In the optional unit field, ○ and X indicate mountable and non-mountable, respectively.

Note 3: Coil consumption are average values in case of applying 220V60Hz to AC200V coil.



## Contact Relays

### Contact arrangement/Contact placement

Model name	SR-T5 SRD-T5	SR-T9 SRD-T9
Contact arrangement	5a 4a1b 3a2b	9a 7a2b 5a4b
Contact placement	<p>5a</p>	<p>9a</p>
	<p>4a1b</p>	<p>7a2b</p>
	<p>3a2b</p>	<p>5a4b</p>

### Combination with additional auxiliary contact block

The SR-T series contactor type Contactor Relay is usable in combination with the following additional auxiliary contact blocks.

Contactor Relay	Auxiliary contact blocks	Front clip-on						Side clip-on	
		UT-AX4			UT-AX2			UT-AX11	UT-AX11
Model name	Contact arrangement	4a	3a1b	2a2b	2a	1a1b	2b	1a1b+1a1b	1a1b
SR-T5 SRD-T5	5a	9a	8a1b	7a2b	7a	6a1b	5a2b	7a2b	6a1b
	4a1b	8a1b	7a2b	6a3b	6a1b	5a2b	4a3b	6a3b	5a2b
	3a2b	7a2b	6a3b	5a4b	5a2b	4a3b	3a4b	5a4b	4a3b

Note 1: The auxiliary contact blocks cannot be mounted on SR(D)-T9.

Note 2: The Contactor Relay is not usable with front clip-on and side clip-on blocks mounted at the same time.

Note 3: The contact arrangements in □ are standard combinations.

## Optional Units

### Model list (for MS-T series)

品名	補助接点ユニット (注1)			操作コイル用サージ吸収器ユニット						
	形式	UT-AX4	UT-AX2	UT-AX11	UT-SA21	UT-SA22	UT-SA13	UT-SA23	UT-SA25	
取付	ヘッドオン			サイドオン	トップオン					
仕様・機能	・ツイン接点採用 ・補助接点4極 (4a,2a2b,3a1b)			・ツイン接点採用 ・補助接点2極 (2a,1a1b,2b)	・ツイン接点採用 ・補助接点2極 (1a1b)	バリスタ付 AC24V (DC共用) AC48V (DC共用) AC200V (DC共用) AC400V	バリスタ+表示灯付 AC200V (DC共用)	CR付 DC200V	CR付 AC200V	バリスタ+CR付 AC48V (DC共用) AC200V (DC共用)
外観 (代表例)										
適用機種	電磁接触器			S-T10~T32/SD-T12~T32						
	電磁開閉器			MSO-T10~T25/MSOD-T12~T21						
	電磁継電器			SR(D)-T5			SR(D)-T5/T9			
	サーマルリレー			-						

品名	機械的インタロックユニット			単体取付ユニット	主回路導体キット			
	形式	UT-ML11	UT-ML20	UN-ML21	UT-HZ18	UT-SD10	UT-SD20	UT-SD25
取付	サイドオン			-	-			
仕様・機能	・単体接触器(2台)と 組合せで可逆式構成			サーマルリレーと 組合せる事により ネジ取付・ IEC35mm レール取付が可能	可逆接続時に使用する導体ユニット *6本/セット (注2)(注3)			
外観 (代表例)								
適用機種	電磁接触器	S-T10~T20専用	SD-T12~T20専用	S(D)-T21~T32	-	S-T10	S(D)-T12/T20	S(D)-T21/T25
	電磁開閉器	-	-	-	-	-	-	-
	電磁継電器	-	-	-	-	-	-	-
	サーマルリレー	-	-	TH-T18(KP)	-	-	-	-

品名	コイル用DC/ACインターフェイスユニット		主回路サージ吸収器ユニット		
	形式	UT-SY21	UT-SY22	UT-SA3320	UT-SA3332
取付	ヘッドオン				
仕様・機能	無接点出力 (トライアック出力)		接点出力 (リレー出力)		
外観 (代表例)					
適用機種	電磁接触器	S-T10~T32		S (D) -T10~T20	S (D) -T21~T32
	電磁開閉器	MSO-T10~T32		MOS (D) -T10~T20	MOS (D) -T21~T32
	電磁継電器	-		-	-
	サーマルリレー	-		-	-

注1: 補助接点ユニットのヘッドオンとサイドオンを同一の本体に取付けて使用することはできません。  
注2: 導体には電源側用、負荷側用がありますので取付け時に注意してください。

注3: T32への取付けにはUN-SD18CXをご使用ください。

## Optional Units

### ● UT-AX□ auxiliary contact block

#### Ratings and specifications

Model name		UT-AX4	UT-AX2	UT-AX11
Mounting method		Front clip-on	Front clip-on	
Number of poles		4	2	2
Contact arrangement		4a	2a	Side clip-on 1a1b
		3a1b	1a1b	
		2a2b	2b	
Applicable model	Magnetic Contactor	AC operated type	S-T10, T12, T20, T21, T25, T32	
		DC operated type	S-DT12, T20, T21, T32	
	Contactor Relay	AC operated type	SR-T5	
		DC operated type	SRD-T5	
Rated insulation voltage [V]		690		
Rated impulse withstand voltage [kV]		6		
Rated frequency [Hz]		50/60		
Pollution degree		3		
Contact rating (Note 2)	AC rated operational current (A)	Category AC-15 (coil load)	AC120V	6
			AC240V	3
			AC440V	1.5
			AC550V	1.2
		Category AC-12 (resistive load)	AC120V	10
			AC240V	8
	DC rated operational current (A)	Category DC-13 (large coil load)	DC24V	3
			DC48V	1.5
			DC110V	0.6(2)
		Category DC-12 (resistive load)	DC220V	0.3(0.8)
			DC24V	10
			DC48V	8
Minimum applicable load level		20V 3mA		
Performance	Mechanical durability [ten thousand times]	1,000		
	Electrical durability [ten thousand times]	50		
	Switching frequency [time/hour]	1,800		
	Terminal screw size/type	M3.5 cross slot screw with pressure plate		
	Applicable electric wire size [φmm,mm²]	φ1.6 0.75 to 2.5		
Applicable crimp lug size		1.25-3.5 to 2-3.5		
Terminal screw tightening torque [N·m]		0.9 to 1.5		

Note 1: It is not possible to mount both the front clip-on and side clip-on units at the same time.

Note 2: The value in brackets indicates the current when switching the load with two poles installed in series.

### ● UT-SA□ Operation Coil Surge Absorber Unit

#### Types and application

Surge absorber element	Model	Designation	Internal element specifications	Applicable voltage range															
				AC 50/60Hz						DC									
				12V	24V	50V	100V	127V	200V	240V	346V	480V	12V	24V	48V	60V	100V	125V	200V
Varistor	UT-SA21	AC24V	Varistor voltage47V	□						□									
		AC48V	Varistor voltage120V	□						□									
		AC200V	Varistor voltage470V	□						□									
		AC400V	Varistor voltage910V	□						□									
Varistor + indicating LED	UT-SA22	AC200V	Varistor voltage470V	□						□									
CR	UT-SA13	DC200V	0.5 μF120Ω	□						□									
	UT-SA23	AC200V	0.2 μF120Ω	□						□									
Varistor + CR	UT-SA25	AC48V	Varistor voltage120V 0.1 μF47Ω	□						□									
		AC200V	Varistor voltage470V 0.1 μF47Ω	□						□									

□ Applicable voltage □ Rated voltage range

Note: The surge suppression effect for the applied circuit is smaller in the □ (applicable voltage) range than in the □ (recommended voltage) range. Even in the □ (recommended voltage) range, the surge suppression effect may not be enough depending on the characteristics of the connected device. (Check the influence of surge using the actual device in advance.)

#### Application and selection

Model	Applicable model	
	Magnetic Contactor	Contactor Relay
UT-SA21		
UT-SA22		
UT-SA13	S-T10, T12, T20, T21, T25, T32	SR-T5,T9
UT-SA23	SD-T12,T20,T21,T32	SR(D)-T5,T9
UT-SA25		

#### Precautions for application

- (1) Connect the terminals of surge absorber unit in parallel with the operation coil of the Magnetic Contactor or Contactor Relay.
- (2) When used in combination with the surge absorber, the open time of the Magnetic Contactor or Contactor Relay may be 1.5 to 3 times longer.
- (3) The surge absorber is designed to suppress the surge from the Magnetic Contactor. The warranty does not cover external surges. Extreme external surges may damage the product.





● UT-SD□主回路導体キット

種類と適用

適用する電磁接触器のフレーム	可逆用	渡り用
T10	UT-SD10	UT-SG10
T12,T20	UT-SD20	UT-SG20
T21,T25	UT-SD25	UT-SG25
備考	6本/セットになっています。導体には、電源側用、負荷側用がありますので、取付け時に注意してください。	3本/セットになっています。電源側端子にも取付けることができます。

● UT-SA33□主回路サージ吸収器ユニット

種類


形名	取付方法	内部素子仕様	定格電圧・周波数	適用機種
UT-SA3320	ヘッドオン	(0.3μF+60Ω)×3	AC240V 50/60Hz	S-T10, T12, T20 (BC) SD-T12, T20 (BC)
UT-SA3332				S-T21, T25, T32 (BC) SD-T21, T32 (BC)

仕様

耐電圧		絶縁抵抗	重畳パルス条件(最大)		最高印加電圧	機械的耐久性 (ヘッドオンタイプ)
端子間	端子-ケース間		尖頭値	パルス幅		
AC600V 1分間	AC2000V 1分間	300MΩ 以上	2000V	1μsec.	800V	1000万回

使用上の注意  
 (1) インバータ回路等高周波成分の多い回路には使用しないでください。  
 (2) リレー等の接点容量の小さい機器の負荷側には使用しないでください。

接続

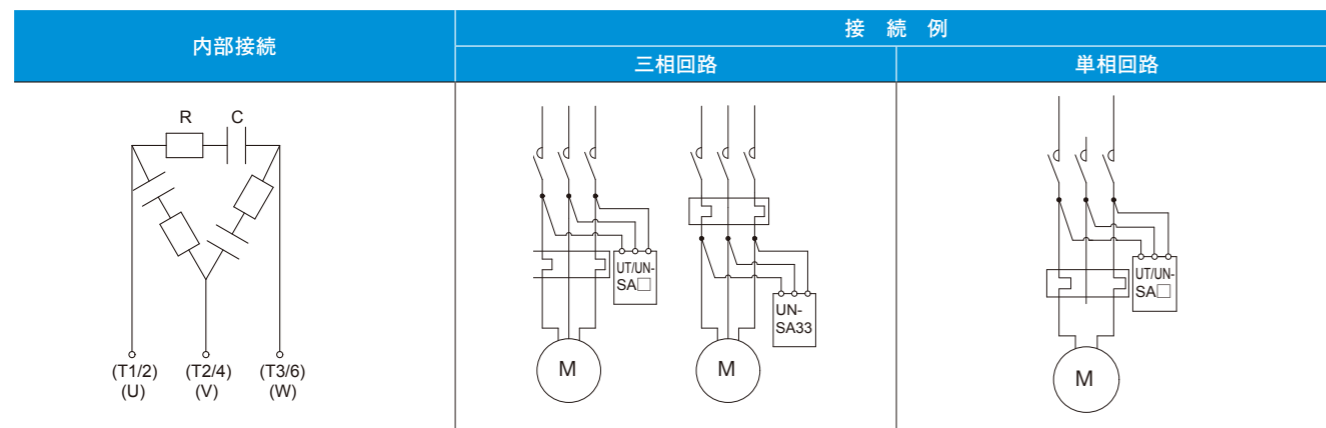

● UT/UN-SY□操作コイル用DC/ACインタフェースユニット

形名

ユニット形名	出力方式	ユニット取付方法	適用する電磁接触器、電磁継電器の形名
UT-SY21	無接点出力 (トライアック出力)	トップオン 追加取付	S-T10~T32
UT-SY21BC			
UT-SY22			
UT-SY22BC	接点出力 (リレー出力)	単体取付	S-T10~T32 S-N10~N400 SR-K100
UN-SY11	無接点出力 (トライアック出力)		
UN-SY12	接点出力 (リレー出力)		


注1. 操作コイルは、コイル電圧呼びAC100VまたはAC200Vが適用できます。

仕様

形名	UT-SY21	UT-SY22	UN-SY11	UN-SY12
定格使用電圧	DC24V			
許容電圧変動	定格使用電圧の85%~110%			
電流	15mA	10mA	15mA	10mA
消費電力	0.4W	0.24W	0.4W	0.24W
最低動作電圧	18V			
最高開放電圧	4V	1V	4V	1V
出力仕様	無接点出力 (トライアック出力)	接点出力	無接点出力 (トライアック出力)	接点出力
定格使用電圧	AC100V~AC240V 50/60Hz			
出力電流	0.5A AC-15			
開路時洩れ電流	5mA/240V	なし	5mA/240V	なし
動作時間	動作時1ms、 開放時0.5サイクル+1ms以下	10ms以下	動作時1ms、 開放時0.5サイクル+1ms以下	10ms以下
閉閉耐久性	機械的	500万回	—	500万回
	電氣的	500万回	—	100万回 (注1)
使用温度	-10°C~55°C			
端子適合電線	電線	φ1.6mm、1.25~2mm <sup>2</sup>		
	圧着端子	1.25-3.5、2-3.5		

注1. UN-SY12とSR-K100形を組み合わせ使用のとき500万回となります。

接続例 (接続図)

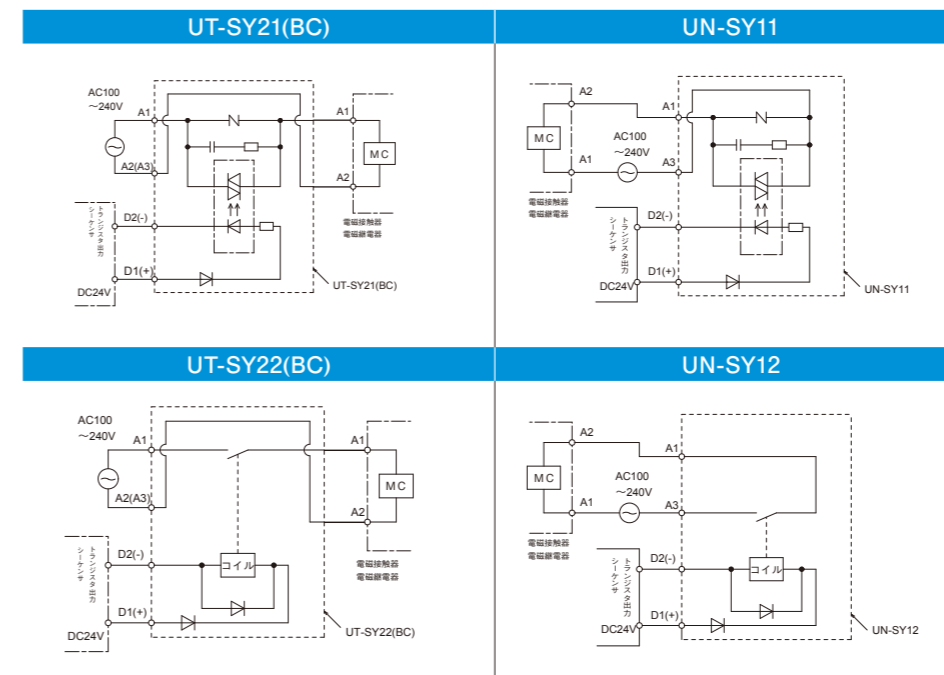

MS-T Series Introduction  
Application to Thema Overhaul Relay Selection and Application  
Product Introduction  
Overseas Standard  
Type Codes  
Order Procedure  
Outline Drawing  
Warranty and Safety

# We support your overseas business.



Our standard products comply with the domestic standards as well as various overseas standards and are certified to meet all the standards. (Note1)

Type	Model name	Applicable standard					Safety certification standard
		International	Japan	European countries	China	U.S. & Canada	
Magnetic Contactors	S(D)-T10 to T32	○	○	○	○	○	○
Thermal Overload Relays	TH-T18KP to T25KP	○	○	○	○	○	○
Open Type Magnetic Starters	MSO(D)-T10KP to T25KP (Note2)	○	○	○	○	○	○
Enclosed Magnetic Starters	MS-T10KP to T21KP	○	○	—	—	—	—
Contactors Relays	SR(D)-T5/T9	○	○	○	○	○	○

Note1: ○:Compliant or supported with standard parts, ◎:Certified with standard parts  
 Note2: The Magnetic Starters will be certified under each type name of the Magnetic Contactors and the Thermal Overload Relays on the condition that the Magnetic Contactors and the Thermal Overload Relays are used in combination.  
 Note3: For the UL standard for the U.S.A. & Canada, refer to the table on the right.

## UL Approval for U.S.A. and Canada ※UL60947-4-1A (CSA C22.2 NO.60947-1) / UL508(CSA C22.2 NO.14)

### Magnetic Contactor

Type	Main Contact										Auxiliary Contact (Rating Code)	Mark	
	Maximum Horsepower Rating [HP]												
	Single Phase					Polyphase							
S-(2X)T10	1/2	1	1-1/2	2	2	1	3	3	5	5	13	A600 and Q300	 File No. E58968 CCN: NLDX (U.S.A.) NLDX7 (Canada)
S-(2X)T12	1/2	1	1-1/2	2	2	1	3	3	7-1/2	7	20		
S-(2X)T20	1	2	2	3	3	2	3	5	7-1/2	7	30		
S-(2X)T21	1	—	3	5	5	2	5	5	10	10	30		
S-(2X)T25	2	—	3	7-1/2	7-1/2	3	7-1/2	7-1/2	15	15	32.5		
S-(2X)T32	2	5	5	10	7-1/2	5	10	10	20	15	32.5	—	—

### Mechanical Interlock

UT-ML11 : Approval as Unlisted Component to be suitable for Type S-2XT10, -2XT12 or -2XT20 Reversing Magnetic Contactor

### Thermal Overload Relay

Type	Heater Designation	FLA Adjustable Range [A]	Magnetic Contactor to be coupled	Connecting Bar for coupling	Trip Class	Auxiliary Contact (Rating Code)	Mark
TH-T18KP	0.12 A	0.1 - 0.16	S-(2X)T10, S-(2X)T12, S-(2X)T20	Unnecessary	10	C600	 File No. E58969
	0.17 A	0.14 - 0.22					
	0.24 A	0.2 - 0.32					
	0.35 A	0.28 - 0.42					
	0.5 A	0.4 - 0.6					
	0.7 A	0.55 - 0.85					
	0.9 A	0.7 - 1.1					
	1.3 A	1 - 1.6					
	1.7 A	1.4 - 2					
	2.1 A	1.7 - 2.5					
	2.5 A	2 - 3					
	3.6 A	2.8 - 4.4					
	5 A	4 - 6					
	6.6 A	5.2 - 8					
9 A	7 - 11						
TH-T25KP	11 A	9 - 13	S-(2X)T12, S-(2X)T20	UN-TH21	10	B600	 File No. E58969 CCN: NKCR (U.S.A.) NKCR7 (Canada)
	15 A	12 - 18 <sup>1</sup>	S-(2X)T20				
	0.24 A	0.2 - 0.32	S-(2X)T21, S-(2X)T25				
	0.35 A	0.28 - 0.42					
	0.5 A	0.4 - 0.6					
	0.7 A	0.55 - 0.85					
	0.9 A	0.7 - 1.1					
	1.3 A	1 - 1.6					
	1.7 A	1.4 - 2					
	2.1 A	1.7 - 2.5					
	2.5 A	2 - 3					
	3.6 A	2.8 - 4.4					
	5 A	4 - 6					
	6.6 A	5.2 - 8					
9 A	7 - 11						
11 A	9 - 13						
15 A	12 - 18						
22 A	18 - 26	S-(2X)T25					

Note : <sup>1</sup> - The available FLA rating is 16A or less.

### Contactors Relay and Auxiliary Contact Block

Type	Auxiliary Contact (Rating Code)	Mark
SR-T5 SR-T9	A600 and Q300	 File No. E58969 CCN: NKCR (U.S.A.) NKCR7 (Canada)
(UT-AX2) UT-AX4 (UT-AX11)		 File No. E58969 CCN: NKCR2 (U.S.A.) NKCR8 (Canada)

### Surge Absorber Unit for Operating Coil

Type	Rating, 50/60Hz	Mark
UT-SA21	24-48V	 File No. E58969 CCN: NKCR2 (U.S.A.) NKCR8 (Canada)
UT-SA22	100-240V	
UT-SA23	100-240V	
UT-SA25	24-50V	

Introduction and Application | Selection and Application | MS-T Series Introduction | Product Introduction | Overseas Standard | Type Codes | Order Procedure | Outline Drawing | Warranty and Safety



### Instruction for UL /CSA

#### Available Short Circuit Current Rating (SCCR) and Short Circuit Protection Device (S.C.P.D.)

Model	S.C.P.D. Fuse, Class K5 Max. Current Ratings	Available Short Circuit Current	S.C.P.D. Circuit Breaker									Available Short Circuit Current		
			Max. Current Ratings			Min. Interrupting Ratings								
			240V <sup>*1</sup>	480V <sup>*1</sup>	600V	240V <sup>*1</sup>	480V <sup>*1</sup>	600V	240V <sup>*1</sup>	480V <sup>*1</sup>	600V			
S-(2x)T10/S(D)-(2x)T12	30A	5kA	240V <sup>*1</sup>	480V <sup>*1</sup>	600V	240V <sup>*1</sup>	480V <sup>*1</sup>	600V	240V <sup>*1</sup>	480V <sup>*1</sup>	600V	10kA	10kA	10kA
S(D)-(2x)T20	70A		30A	30A	N/A	10kA	18kA	N/A	10kA	10kA	N/A	10kA	N/A	N/A
			15A	15A		25kA	10kA		25kA					
S(D)-(2x)T21	70A		50A	50A		10kA	18kA		10kA	10kA				
			15A	15A		25kA	10kA		25kA					
S-(2x)T25	100A	75A	75A	50kA		50kA	35kA		35kA					
S(D)-(2x)T32	100A	75A	75A	14kA	14kA	10kA	10kA							
			50kA	50kA	35kA	35kA	35kA							

\*1. Main circuit wires must be connected to contactor using applicable lugs shown in below table.

Model	Heater Desig.	Adjustable Range, Amps. Max. Circuit Voltage	S.C.P.D. Fuse, Class K5 Max. Current Ratings	Available Short Circuit Current	S.C.P.D. Circuit Breaker									Available Short Circuit Current		
					Max. Current Ratings			Min. Interrupting Ratings								
					240V <sup>*1</sup>	480V <sup>*1</sup>	600V	240V <sup>*1</sup>	480V <sup>*1</sup>	600V	240V <sup>*1</sup>	480V <sup>*1</sup>	600V			
TH-T18KP	0.12A	0.10 - 0.16	15A	5kA	15A	15A	N/A	10kA / 25kA	10kA	N/A	10kA / 25kA	10kA	10kA	N/A		
	0.17A	0.14 - 0.22														
	0.24A	0.20 - 0.32														
	0.35A	0.28 - 0.42														
	0.5A	0.4 - 0.6														
	0.7A	0.55 - 0.85														
	0.9A	0.7 - 1.1														
	1.3A	1.0 - 1.6														
	1.7A	1.4 - 2.0														
	2.1A	1.7 - 2.5														
	2.5A	2.0 - 3.0														
	3.6A	2.8 - 4.4														
	5A	4.0 - 6.0														
	6.6A	5.2 - 8.0														
	TH-T25KP	0.24A													0.20 - 0.32	15A
0.35A		0.28 - 0.42														
0.5A		0.4 - 0.6														
0.7A		0.55 - 0.85														
0.9A		0.7 - 1.1														
1.3A		1.0 - 1.6														
1.7A		1.4 - 2.0														
2.1A		1.7 - 2.5														
2.5A		2.0 - 3.0														
3.6A		2.8 - 4.4														
5A		4.0 - 6.0														
6.6A		5.2 - 8.0														
9A		7 - 11														
11A		9 - 13														
15A		12 - 18														
22A <sup>*4</sup>	18 - 26	100A	75A	75A	14kA/50kA											

\*1. Main circuit wires must be connected to contactor using applicable lugs shown in next table.  
 \*2. 11A heater is applied to types S(D)-T12 and S(D)-T20.  
 \*3. 15A heater is applied to type S(D)-T20.  
 \*4. 22A heater is applied to type S-T25.

**WARNING** To provide continued protection against a risk of fire and electric shock, the complete overload relay must be replaced if burnout of current element occurs.

Note1: This overload relay is adjustable and ambient compensated. Set the dial in the position corresponding to the motor full load current.  
 Note2: Trip rating is 125% of setting.

#### Applicable wire size, lug size and tightening torque

Model	S-T10/T12/T20			S-T21	S-T25	S-T21/T25	S-T21/T25	TH-T18KP		TH-T25KP		
Terminal	Main	Auxiliary	Control	Main	Auxiliary	Control	Main	Auxiliary	Main	Auxiliary		
Screw size	M3.5	M3.5	M3.5	M4		M3.5	M3.5	M3.5	M3.5	M4	M3.5	
Wire strip length	10mm	10mm	9mm	11.5mm		11.5mm	9mm	10.5mm	10.5mm	10mm	10.5mm	
Wire size (60/75°C) (copper only) (Sol./Str.)	14 - 12 AWG	14 AWG	14 AWG	14 - 10 AWG	14 - 8 AWG	14 AWG	14 AWG	14 - 12 AWG <sup>*1</sup>	14 AWG	14 - 8 AWG	14 AWG	
Recommended Crimp Lug Size (JST Cat No.) <sup>*3</sup>	1.25-3.5 to 2-3.5	1.25-3.5 to 2-3.5	1.25-3.5 to 2-3.5	1.25-4 to 5.5-4	1.25-4 to 5.5-4	1.25-3.5 to 2-3.5	1.25-3.5 to 2-3.5	1.25-3.5 to 2-3.5	1.25-3.5 to 2-3.5	1.25-4 to 5.5-4	1.25-3.5 to 2-3.5	
Connection to terminal Max. qty.	2 Wires or 2 Lugs per terminal <sup>*2</sup>											
Tightening torque	10.3 lb-in (1.17N·m)	10.3 lb-in (1.17N·m)	10.3 lb-in (1.17N·m)	15 lb-in (1.69N·m)		10.3 lb-in (1.17N·m)	10.3 lb-in (1.17N·m)	10.3 lb-in (1.17N·m)	10.3 lb-in (1.17N·m)	15 lb-in (1.69N·m)	10.3 lb-in (1.17N·m)	

\*1. The available current rating of 15A heater is 16A or less.  
 \*2. Two conductors of the same size can be connected.  
 \*3. Please use swaging tool which is recommended by JST.  
**WARNING** When a 2-wire control is used to reset the automatic reset overload relay of a motor controller, the motor connected to the circuit may start automatically when the relay is in the automatic reset position.

Model	S-T32	
Terminal	Main	Control
Screw size	M4	M3.5
Wire strip length	11.5mm	9mm
Wire size (60/75°C) (copper only) (Sol./Str.)	14 - 10 AWG 8 AWG <sup>*1</sup>	14 AWG
Recommended Crimp Lug Size (JST Cat No.) <sup>*3</sup>	1.25-4 to 5.5-4 8-NK4	1.25-3.5 to 2-3.5
Connection to terminal Max. qty.	2 Wires or 2 Lugs per terminal <sup>*2</sup>	
Tightening torque	15 lb-in (1.69N·m)	10.3 lb-in (1.17N·m)

\*1. If it is necessary to apply 8AWG at the polyphase AC200-208V, it should be applied 75°C copper wire only.  
 \*2. Two conductors of the same size can be connected.  
 \*3. Please use swaging tool which is recommended by JST.


Model	SR-T5/T9	
Terminal	Auxiliary	Control
Screw size	M3.5	M3.5
Wire strip length	10mm	9mm
Wire size (60/75°C) (copper only) (Sol./Str.)	14 AWG	14 AWG
Recommended Crimp Lug Size (JST Cat No.) <sup>*2</sup>	1.25-3.5 to 2-3.5	1.25-3.5 to 2-3.5
Connection to terminal Max. qty.	2 Wires or 2 Lugs per terminal <sup>*1</sup>	
Tightening torque	10.3 lb-in (1.17N·m)	10.3 lb-in (1.17N·m)

\*1. Two conductors of the same size can be connected.  
 \*2. Please use swaging tool which is recommended by JST.


# Type Codes

\* For the information on type codes for orders, check the note in Order Procedure.


## Enclosed Magnetic Starters

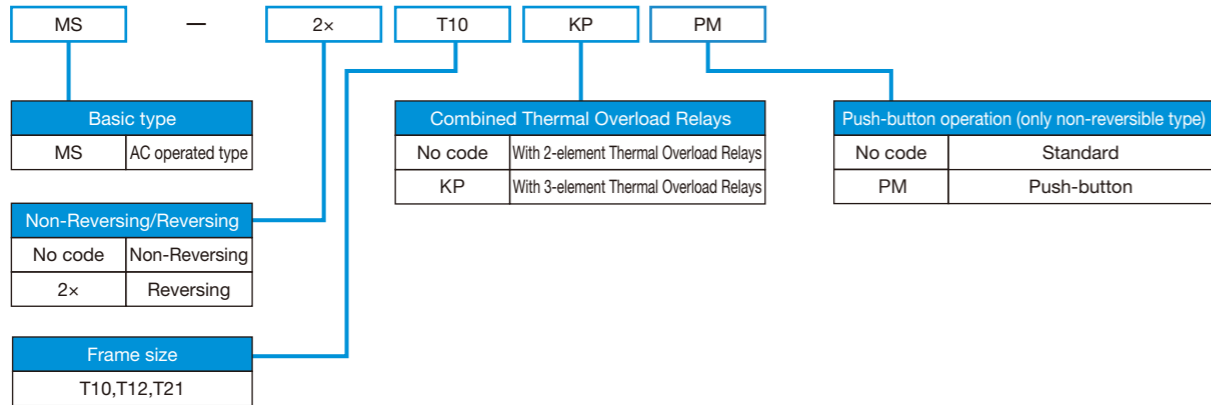


## Open type Magnetic Starters

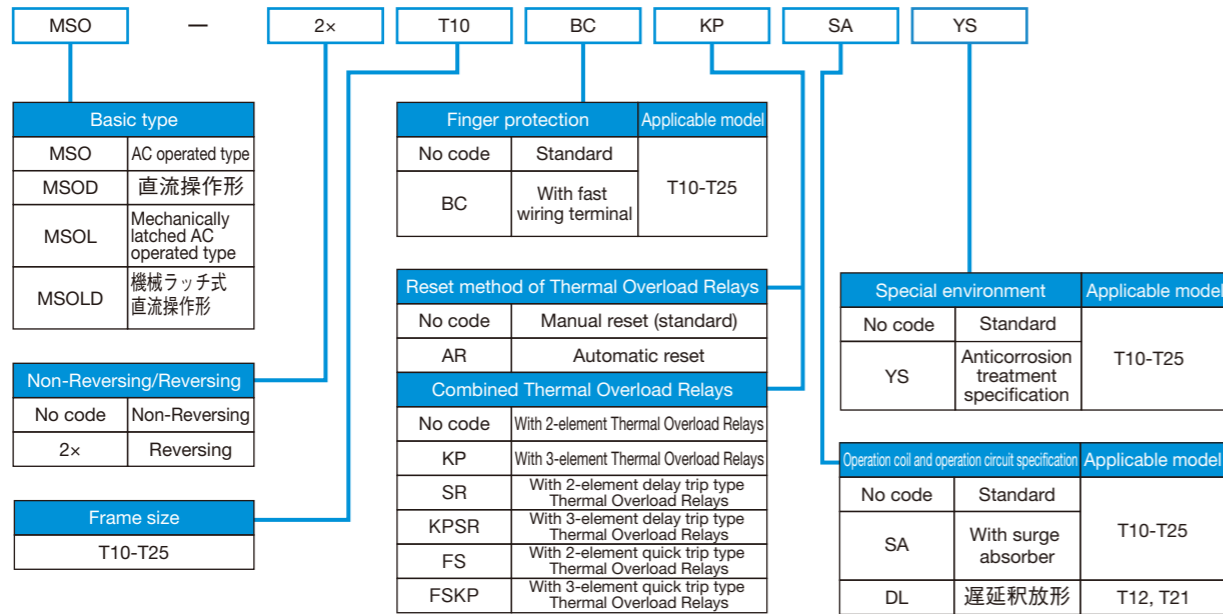


## Magnetic Contactors

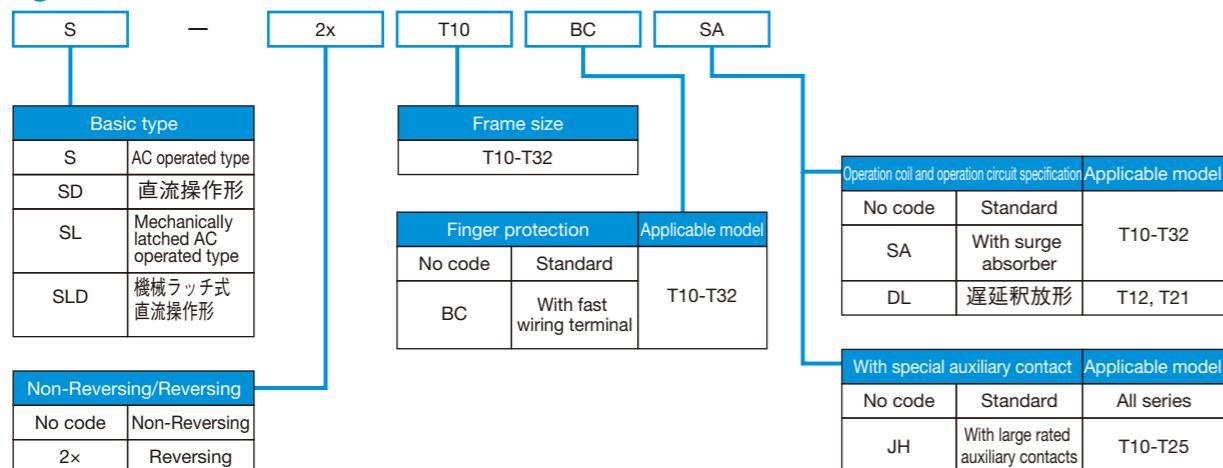


## Thermal Overload Relays

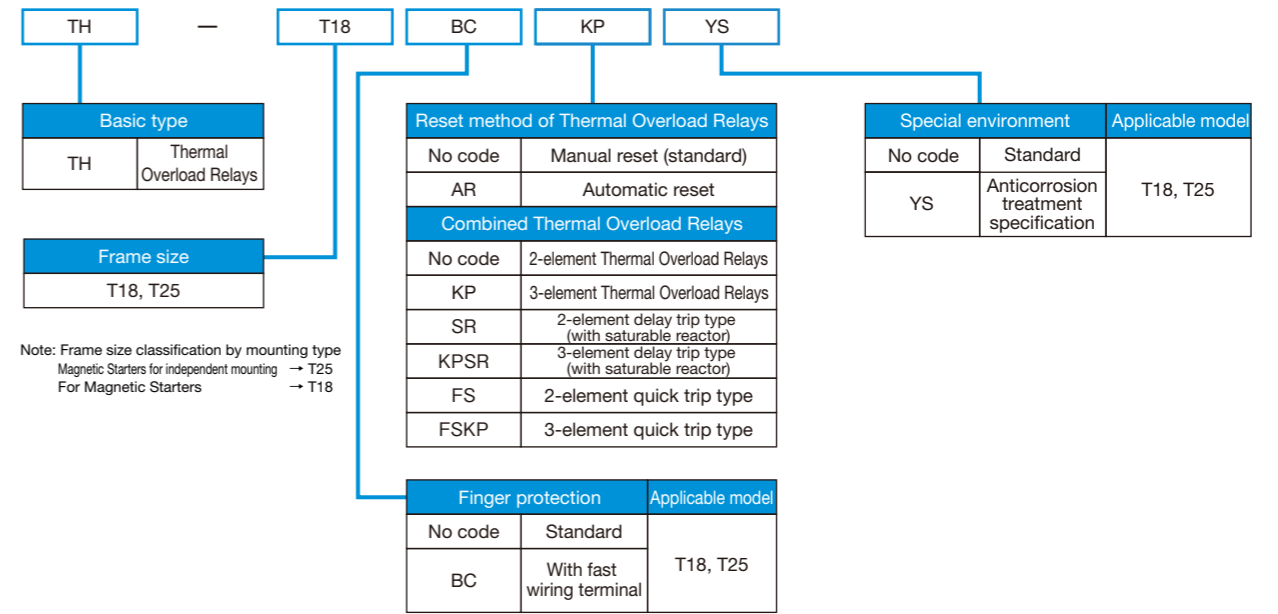

## Contactor Relays

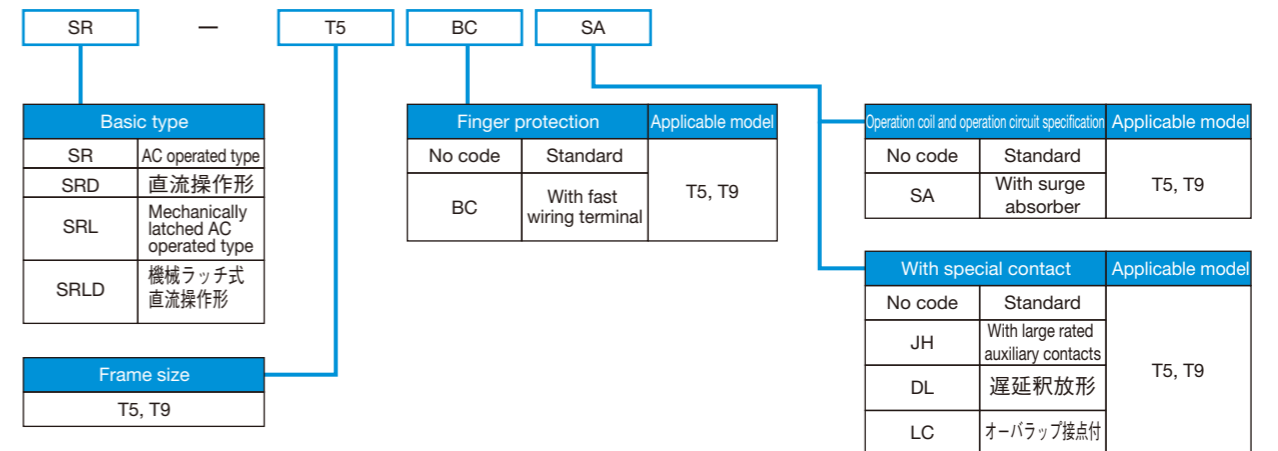

## Optional Units

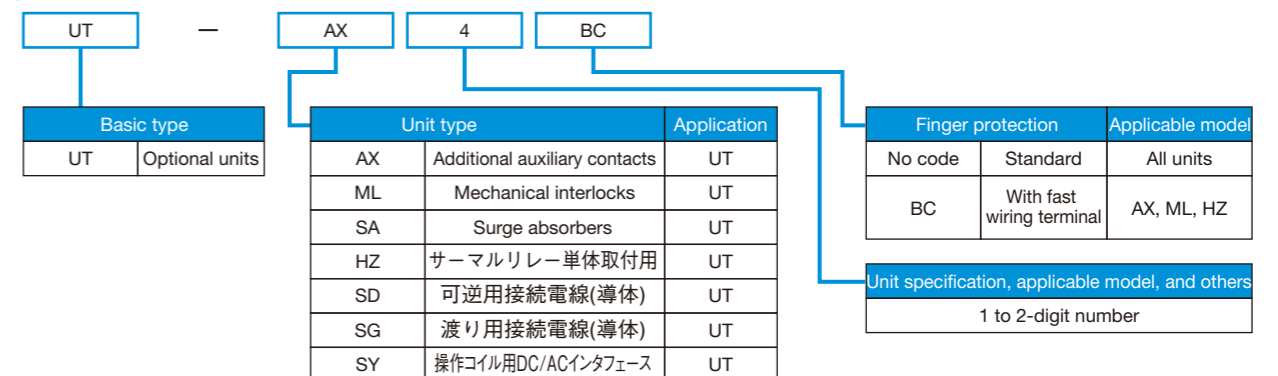

Introduction MS-T Selection and Application Application to Thermal Overload Relays Product Introduction Overseas Standard Type Codes Order Procedure Outline Drawing Warranty and Safety

## Order Procedure

**Note**

For orders, specify products as shown below. Insert a space where ▲ is present. If adding multiple two-character codes (such as SA, BC, and KP) after a frame size (T10 or others) of type name, specify them in alphabetical order of the first letters. (Example: MSO-T10BCKPSA)  
(If they are not in alphabetical order, the type code is automatically changed.)

### Enclosed Magnetic Starters

#### ●MS-(2×)T type

Model name	motor capacity	Main circuit voltage	Operation coil designation or operation circuit voltage	Auxiliary contact
MS-T21	▲ 3.7kW	▲ 200V	▲ AC200V	▲
MS-T10		▲ 200V	▲ AC200V	▲ 1B
Refer to page 12,32.	Select from page 12,16.	Do not add AC to the main circuit voltage. (To distinguish it from the operation circuit voltage)	Select coil designation from pages 13 and 14 or specify the working operation circuit voltage.	Specify the auxiliary contact arrangements. from page 12

### Standard (AC operated) Magnetic Starters

#### ●MSO-(2X)T type

Model name	Heater designation (setting current)	Operation coil designation or operation circuit voltage	Auxiliary contact
MSO-T21	▲ 3.7kW	▲ AC200V	
MSO-T10	▲ 9A	▲ AC200V	▲ 1B
Refer to page 12,32.	Select from page 12,16.	Select coil designation from pages 13 and 14 or specify the working operation circuit voltage.	Specify the auxiliary contact arrangements. from page 12

### Standard (AC operated) Magnetic Contactors

#### ●S-2XT types

Model name	Operation coil designation or operation circuit voltage	Auxiliary contact
S-T20	▲ AC200V	▲ 2A
S-T20	▲ AC100V50Hz	
Refer to page 12,32.	Select coil designation from pages 13 and 14 or specify the working operation circuit voltage.	Specify the auxiliary contact arrangements. from page 12

### Contactors Relays

#### ●SR-T types

Model name	Operation coil designation	Contact arrangement
SR-T5	▲ AC200V	▲ 3A2B
SR-T5	▲ AC100V50Hz	▲ 4A1B
Refer to page 21.	Select coil designation from pages 13 and 14 or specify the working operation circuit voltage.	Designate the contact arrangement listed on page 21.

### Thermal Overload Relays

#### ●TH-T type

Model name	Heater designation
TH-T18KP	▲ 15A
Refer to page 33.	Refer to page 16 and designate the heater nominal.

### Optional Units

#### ●UT-AX□ auxiliary contact block

Model name	Contact arrangement
UT-AX4	▲ 2A2B
Refer to page 24.	Designate the contact arrangement listed on page 24 for the UT-AX2/AX4. UT-AX11 does not need to be designated as 1A1B is fixed.

#### ●UT-SA□ Operation Coil Surge Absorber Unit

Model name	Voltage nominal
UT-SA21	▲ AC400V
UT-SA22	▲ AC200V
UT-SA25	▲ AC48V
Refer to page 25.	Select according to the operation circuit voltage.

#### ●UT-ML□ Mechanical Interlock Unit

Model name
UT-ML11
Refer to page 26.

#### ●UT-SY□ (BC)形操作コイル用DC Interface Modules

形名
UT-SY21
UT-SY21BC
34ページを参照ください。

#### ●UT-HZ18 (BC)、UN-RM20形サーマルリレー用Separate mounting adaptor


形名
UT-HZ18
UT-RM20
32ページを参照ください。




# Outline Drawing, Contact Arrangement

## Magnetic Starters (enclosed)


### MS-T10(KP) type Magnetic Starters (enclosed)

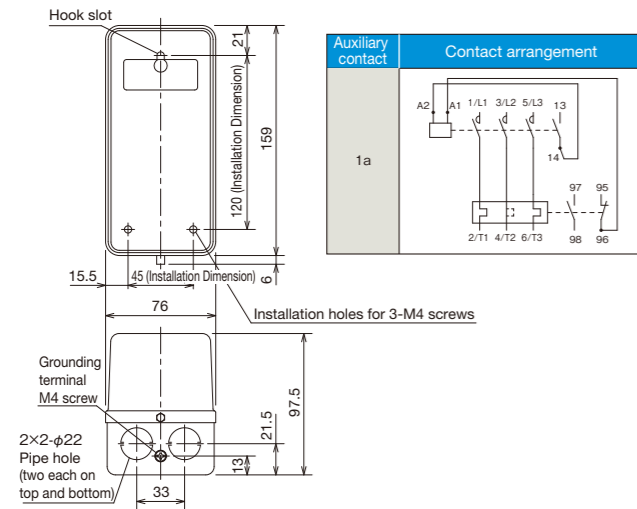


### MS-T21(KP) type Magnetic Starters (enclosed)

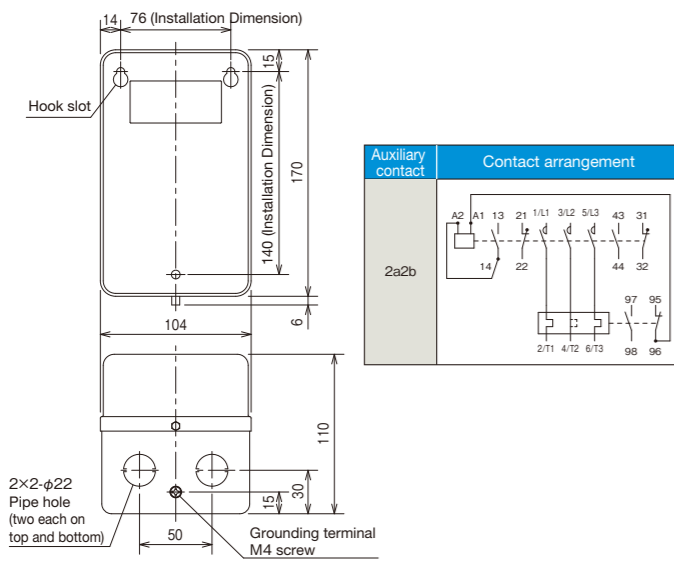

### MS-T12(KP) type Magnetic Starters (enclosed)

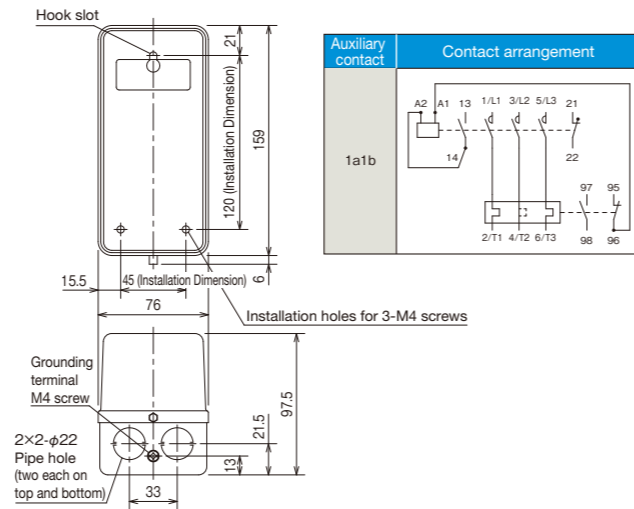


### MS-2xT21(KP) type Reversible type Magnetic Starters (enclosed)

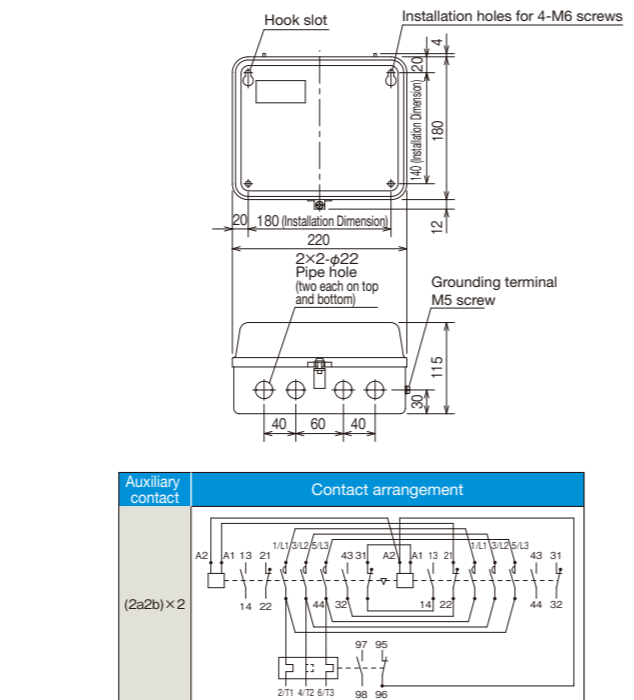


## Magnetic Starters

### MSO-T10KP

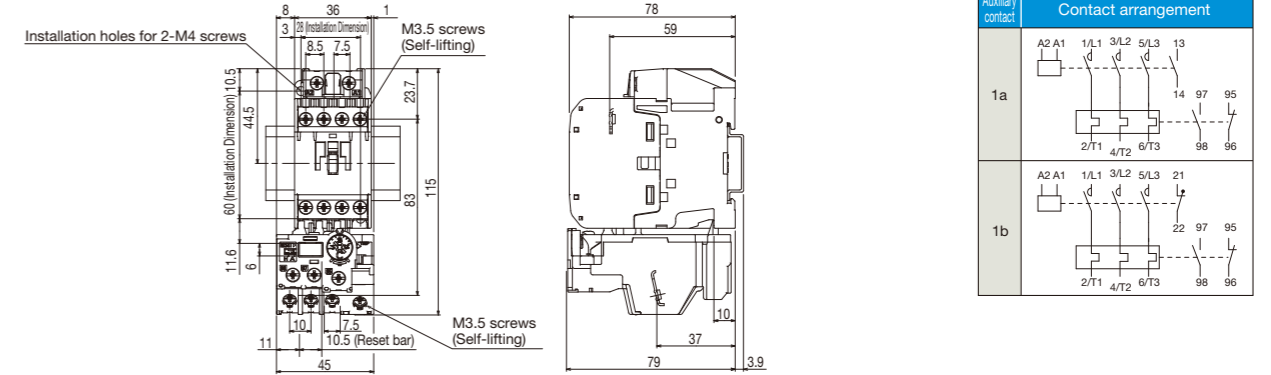


### MSO-T12KP

### MSO-T20KP

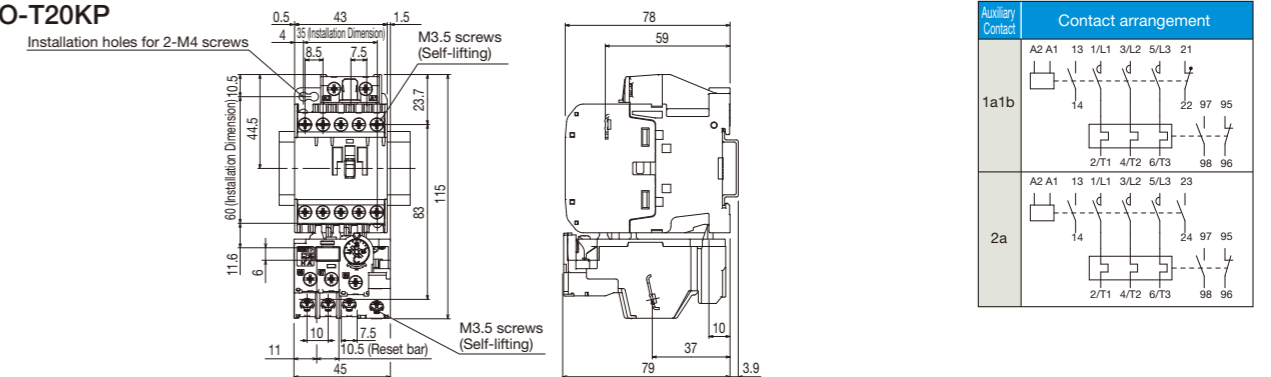

### MSO-T21KP


### MSO-T25KP

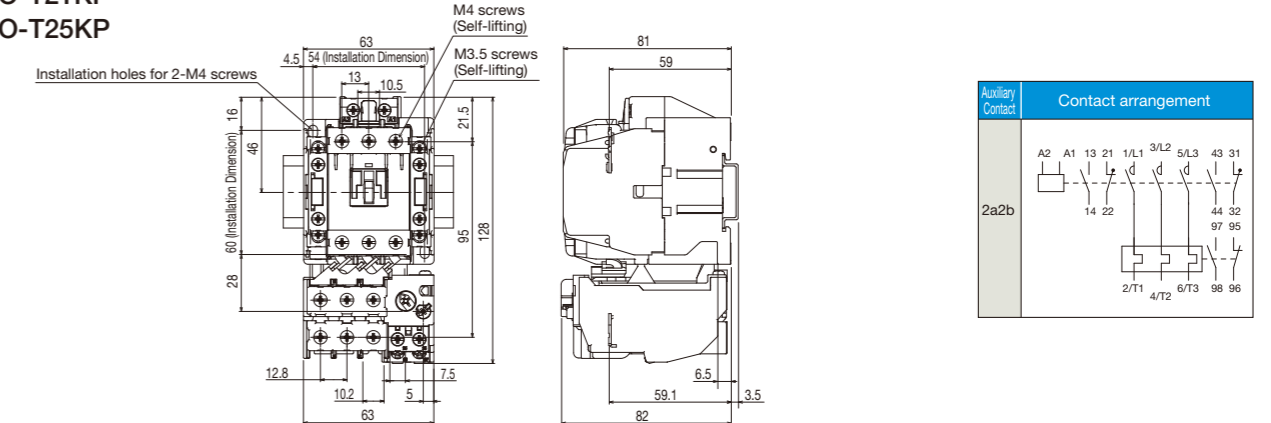

# Outline Drawing, Contact Arrangement


## Magnetic Contactors

### ● S-T10

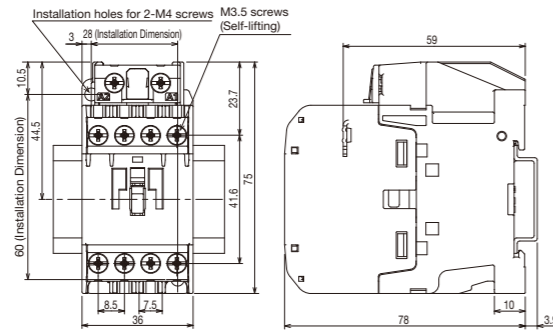


Auxiliary contact	Contact arrangement
1a	
1b	

### ● S-T12 ● S-T20

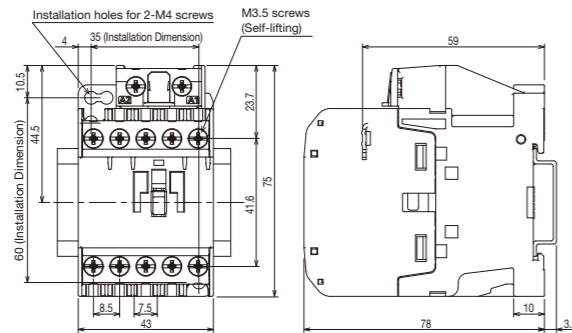


Auxiliary contact	Contact arrangement
1a1b	
2a	

### ● S-T21 ● S-T25

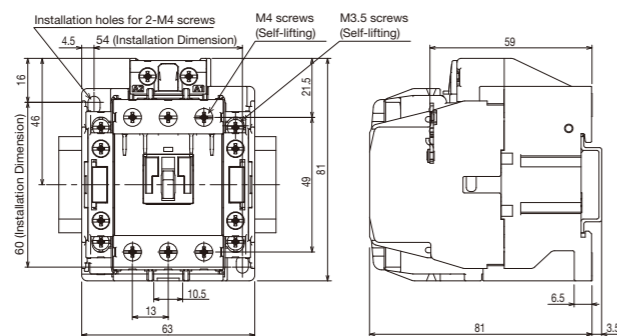


Auxiliary contact	Contact arrangement
2a2b	

### ● S-T32

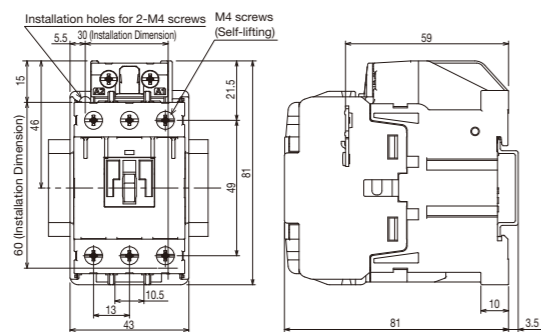


Contact arrangement

### ● S-2xT10

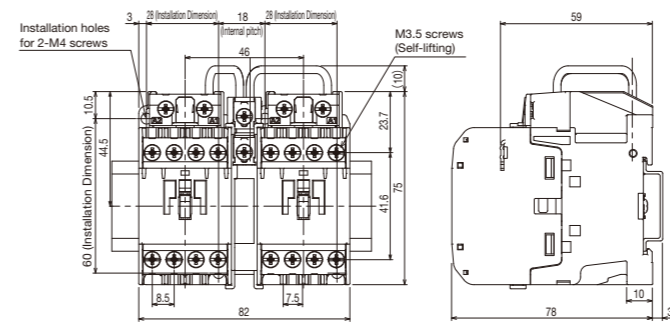


Auxiliary contact	Contact arrangement
1a x 2 + 2b	

### ● S-2xT12 ● S-2xT20

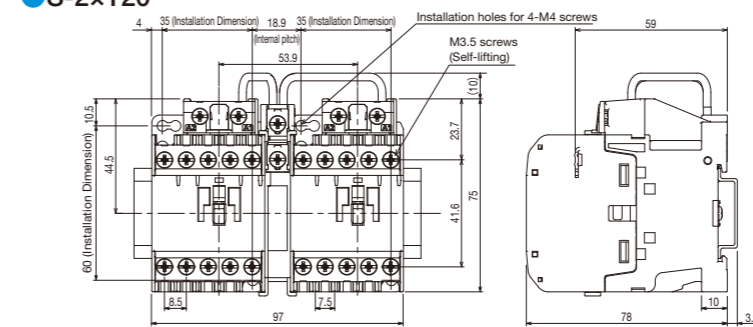


Auxiliary contact	Contact arrangement
1a1b x 2 + 2b	

### ● S-2xT21 ● S-2xT25

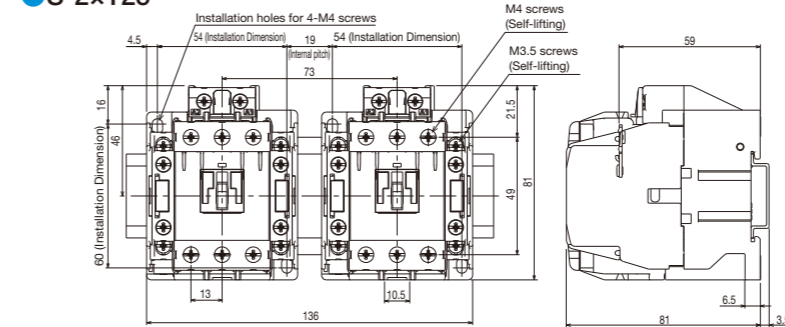

Auxiliary contact	Contact arrangement
2a2b x 2b	

### ● S-2xT32

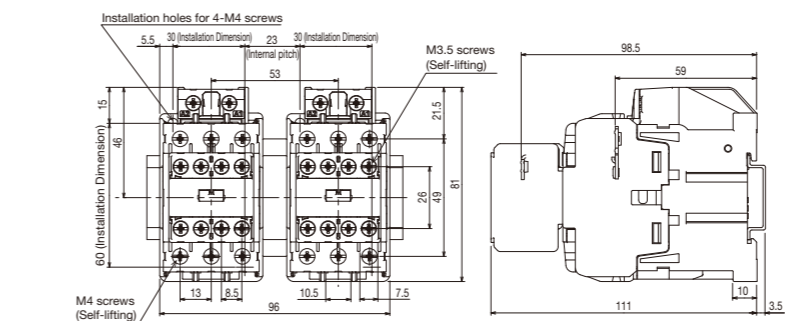

Auxiliary contact	Contact arrangement
2a2b x 2	

# Outline Drawing, Contact Arrangement

## 交流操作形電磁継電器

**SR-T5(BC)**

Installation holes for 2-M4 screws  
M3.5 screws (Self-lifting)  
IEC 35mm幅レール  
取付寸法は30×60、35×50~52でも取付可能

\*1 寸法：ヘッドオン補助接点ユニット(UT-AX2(BC) / UT-AX4(BC))付  
\*2 寸法：IEC35mm幅レールのセンターからの寸法  
\*3、\*4 寸法：サイドオン補助接点ユニット(UT-AX11(BC))付…\*3は1個、\*4は2個(両側)付

**SR-T9(BC)**

Installation holes for 2-M4 screws  
M3.5 screws (Self-lifting)  
IEC 35mm幅レール  
取付寸法は30×60、35×50~52でも取付可能

\*1 寸法：IEC35mm幅レールのセンターからの寸法

## 直流操作形電磁継電器

**SRD-T5(BC)**

Installation holes for 2-M4 screws  
M3.5 screws (Self-lifting)  
IEC 35mm幅レール  
取付寸法は30×60、35×50~52でも取付可能

\*1 寸法：ヘッドオン補助接点ユニット(UT-AX2(BC) / UT-AX4(BC))付  
\*2 寸法：IEC35mm幅レールのセンターからの寸法  
\*3、\*4 寸法：サイドオン補助接点ユニット(UT-AX11(BC))付…\*3は1個、\*4は2個(両側)付

**SRD-T9(BC)**

Installation holes for 2-M4 screws  
M3.5 screws (Self-lifting)  
IEC 35mm幅レール  
取付寸法は30×60、35×50~52でも取付可能

\*1 寸法：IEC35mm幅レールのセンターからの寸法

## Thermal Overload Relays

**TH-T18(BC)(KP)**

Resetting bar (Resetting stroke) (2.5mm)  
Operation indication (Manual trip)  
M3.5 screws (Self-lifting)  
下記電磁接触器との組合せ用  
TH-T18 : S-T10, T12, T20 SD-T12, T20  
単体取付ユニットUT-HZ18と組合せて単体使用可能

Model name	ヒータ呼び	Model name	ヒータ呼び
TH-T18	0.12A~11A 15A	TH-T18BC	0.12A~11A 15A

**TH-T18SR**

Resetting bar (Resetting stroke) (2.5mm)  
Operation indication (Manual trip)  
M3.5 screws (Self-lifting)  
下記電磁接触器との組合せ用  
TH-T18SR : S-T10, T12, T20 SD-T12, T20  
単体取付ユニットUT-HZ18と組合せて単体使用可能

Model name	ヒータ呼び	Model name	ヒータ呼び
TH-T18SR	0.12A~11A 15A		

**TH-T25(BC)(KP)**

Resetting bar (Resetting stroke) (2.5mm)  
Operation indication (Manual trip)  
M3.5 screws (Self-lifting)  
M4 screws (Self-lifting)  
2-M4ねじ用取付穴  
電磁接触器と組合せる場合、下記接続導体(別売)を使用  
S-T21/T25(BC), SD-T21(BC), SL(D)-T21(BC)との組合せ : UN-TH21  
単体取付ユニットUN-RM20と組合せてDINレール単体取付可能

Model name	ヒータ呼び	Model name	ヒータ呼び
TH-T25	0.24A~15A 22A	TH-T25BC	0.24A~15A 22A

**TH-T25(BC)(KP)SR**

Resetting bar (Resetting stroke) (2.5mm)  
Operation indication (Manual trip)  
M3.5 screws (Self-lifting)  
M4 screws (Self-lifting)  
2-M4ねじ用取付穴  
電磁接触器と組合せる場合、下記接続導体(別売)を使用  
S-T21/T25(BC), SD-T21(BC), SL(D)-T21(BC)との組合せ : UN-TH21

Model name	ヒータ呼び	Model name	ヒータ呼び
TH-T25(BC)SR	0.24A~15A 22A		

Introduction, Selection and Application, Product Introduction, Overseas Standard, Type Codes, Order Procedure, Outline Drawing, Warranty and Safety




Outline Drawing, Contact Arrangement

直流操作形電磁開閉器・電磁接触器

- SD-T12(BC)
- SD-T20(BC)


非可逆式

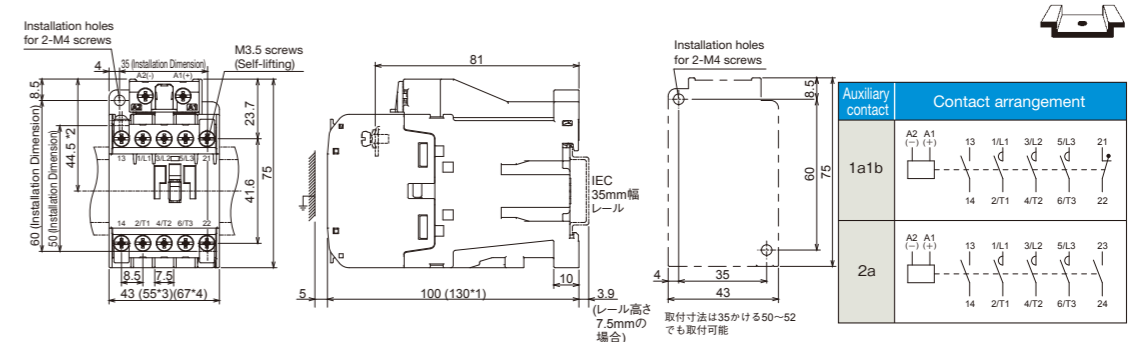

\*1 寸法:ヘッドオン補助接点ユニット(UT-AX2(BC), UT-AX4(BC))付  
\*2 寸法:IEC35mm幅レールのセンターからの寸法  
\*3, \*4 寸法:サイドオン補助接点ユニット(UT-AX11(BC))付...\*3は1個, \*4は2個(両側)付

- SD-2xT12(BC)
- SD-2xT20(BC)


可逆式

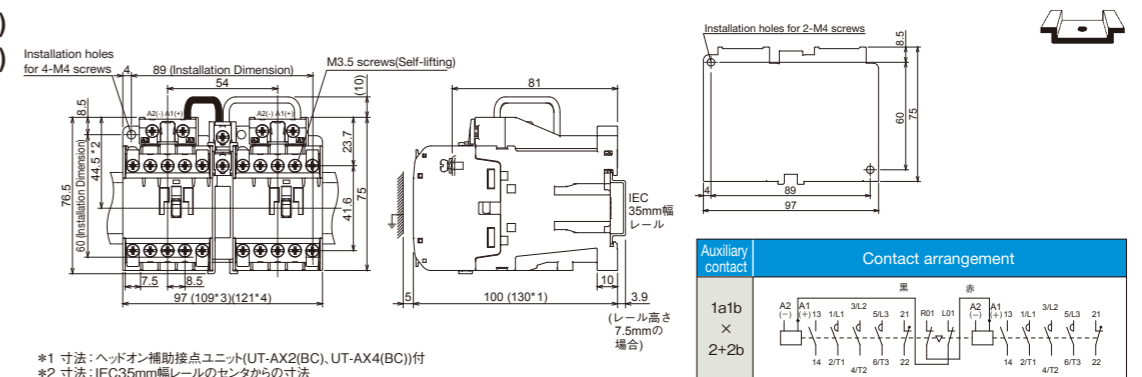

\*1 寸法:ヘッドオン補助接点ユニット(UT-AX2(BC), UT-AX4(BC))付  
\*2 寸法:IEC35mm幅レールのセンターからの寸法  
\*3, \*4 寸法:サイドオン補助接点ユニット(UT-AX11(BC))付...\*3は1個, \*4は2個(両側)付

- MSOD-T12(BC)
- MSOD-T20(BC)


非可逆式

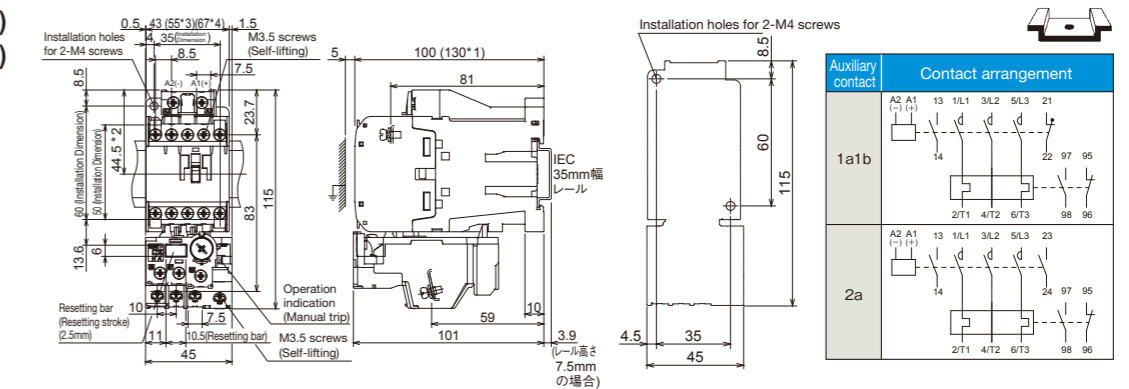

\*1 寸法:ヘッドオン補助接点ユニット(UT-AX2(BC), UT-AX4(BC))付  
\*2 寸法:IEC35mm幅レールのセンターからの寸法  
\*3, \*4 寸法:サイドオン補助接点ユニット(UT-AX11(BC))付...\*3は1個, \*4は2個(両側)付

- MSOD-2xT12(BC)
- MSOD-2xT20(BC)

可逆式

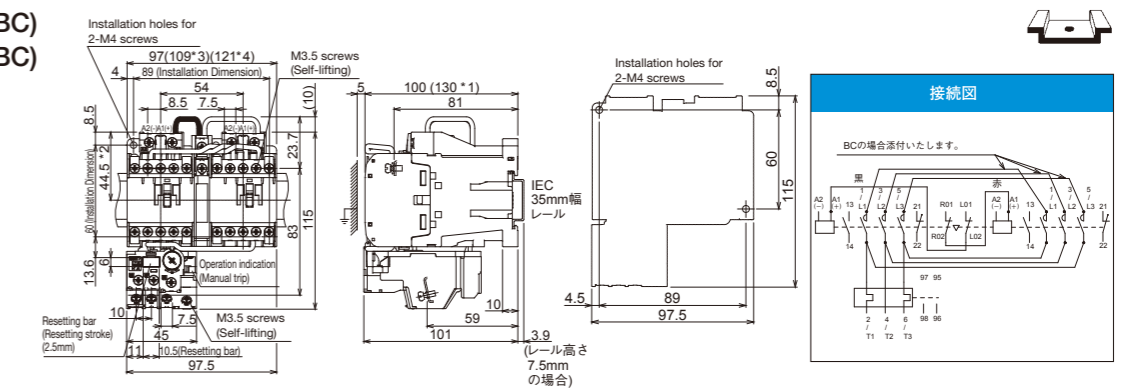

\*1 寸法:ヘッドオン補助接点ユニット(UT-AX2(BC), UT-AX4(BC))付  
\*2 寸法:IEC35mm幅レールのセンターからの寸法  
\*3, \*4 寸法:サイドオン補助接点ユニット(UT-AX11(BC))付...\*3は1個, \*4は2個(両側)付


Introduction MS-T Selection and Application Selection and Application Product Introduction Overseas Standard Type Codes Order Procedure Outline Drawing Warranty and Safety

# Outline Drawing, Contact Arrangement

## 直流操作形電磁開閉器・電磁接触器

### SD-T21(BC)


非可逆式

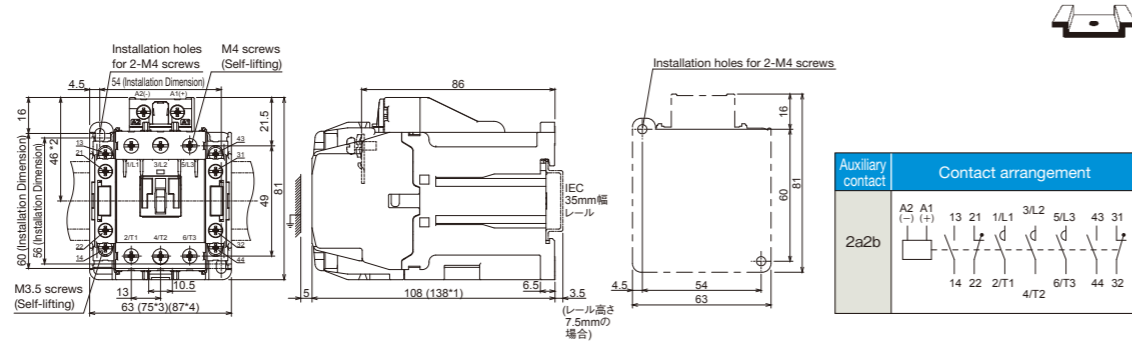

- \*1 寸法: ヘッドオン補助接点ユニット(UT-AX2(BC), UT-AX4(BC))付
- \*2 寸法: IEC35mm幅レールのセンターからの寸法
- \*3, \*4 寸法: サイドオン補助接点ユニット(UT-AX11(BC))付... \*3は1個, \*4は2個(両側)付

### SD-2xT21(BC)


可逆式

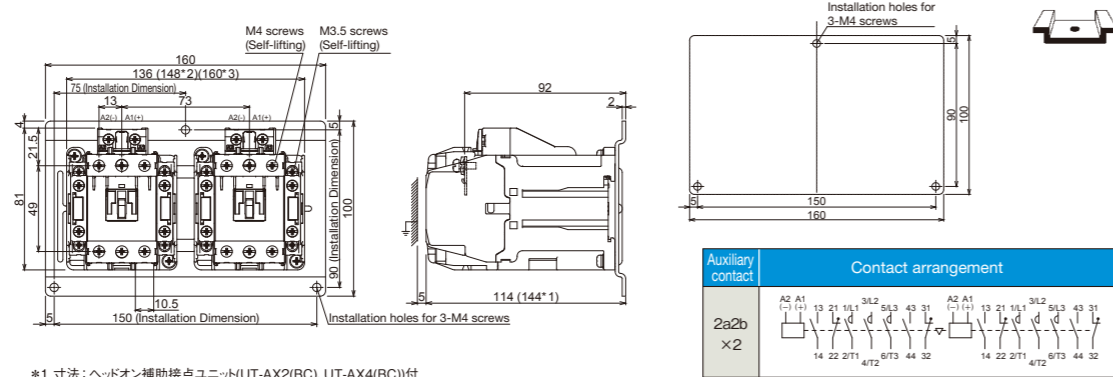

- \*1 寸法: ヘッドオン補助接点ユニット(UT-AX2(BC), UT-AX4(BC))付
- \*2, \*3 寸法: サイドオン補助接点ユニット(UT-AX11(BC))付... \*2は1個, \*3は2個(両側)付

### MSOD-T21(BC)


非可逆式

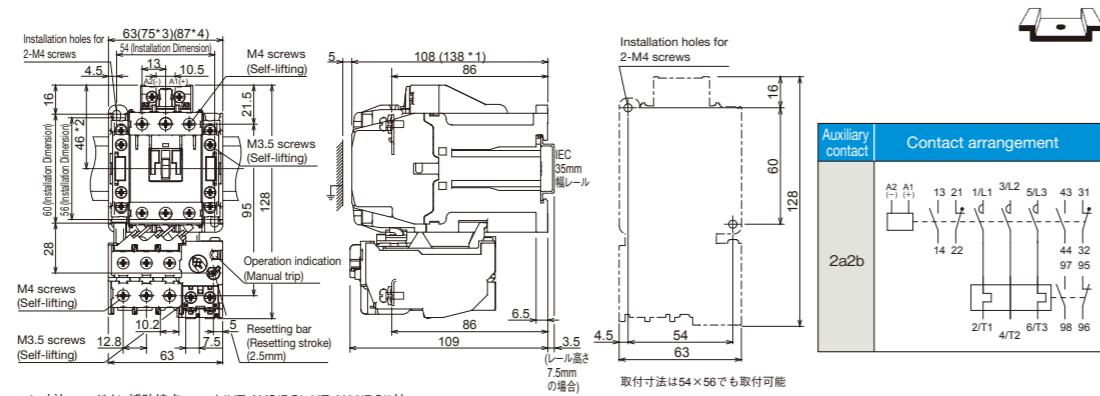

- \*1 寸法: ヘッドオン補助接点ユニット(UT-AX2(BC), UT-AX4(BC))付
- \*2 寸法: IEC35mm幅レールのセンターからの寸法
- \*3, \*4 寸法: サイドオン補助接点ユニット(UT-AX11(BC))付... \*3は1個, \*4は2個(両側)付

### MSOD-2xT21(BC)


可逆式

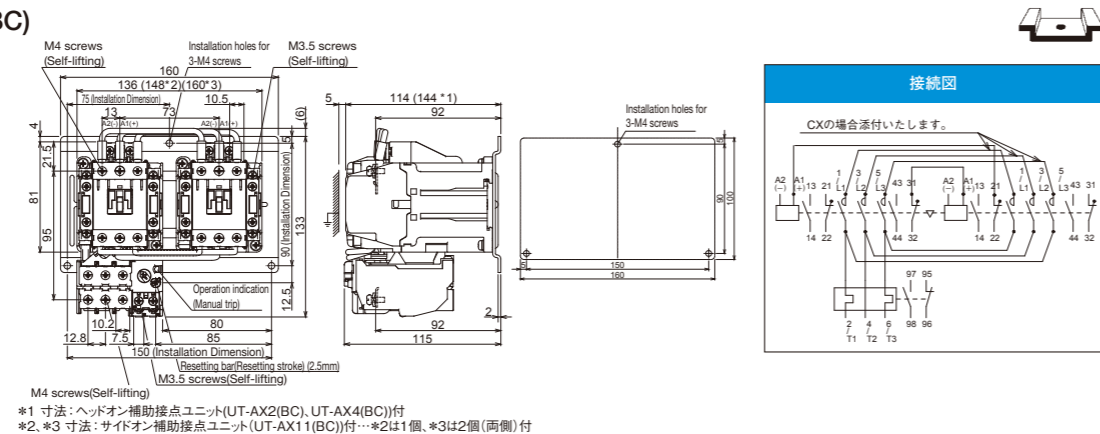

- \*1 寸法: ヘッドオン補助接点ユニット(UT-AX2(BC), UT-AX4(BC))付
- \*2, \*3 寸法: サイドオン補助接点ユニット(UT-AX11(BC))付... \*2は1個, \*3は2個(両側)付

### SD-T32(BC)


非可逆式

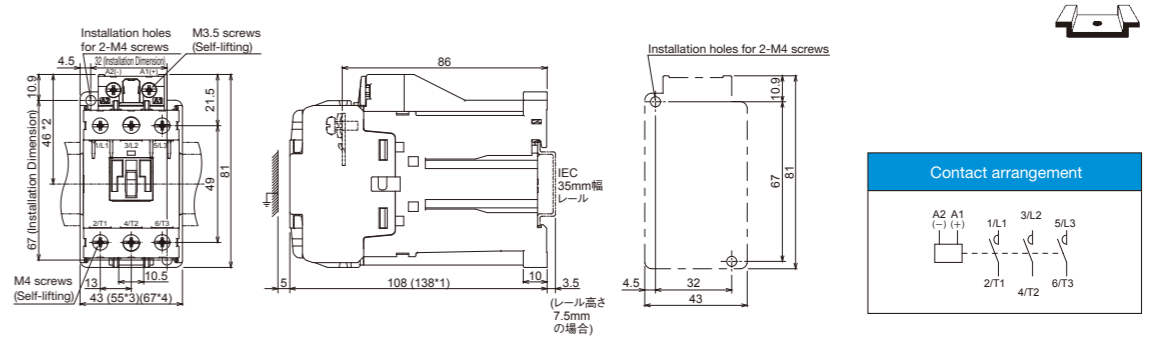

- \*1 寸法: ヘッドオン補助接点ユニット(UT-AX2(BC), UT-AX4(BC))付
- \*2 寸法: IEC35mm幅レールのセンターからの寸法
- \*3, \*4 寸法: サイドオン補助接点ユニット(UT-AX11(BC))付... \*3は1個, \*4は2個(両側)付

### SD-2xT32(BC)

可逆式

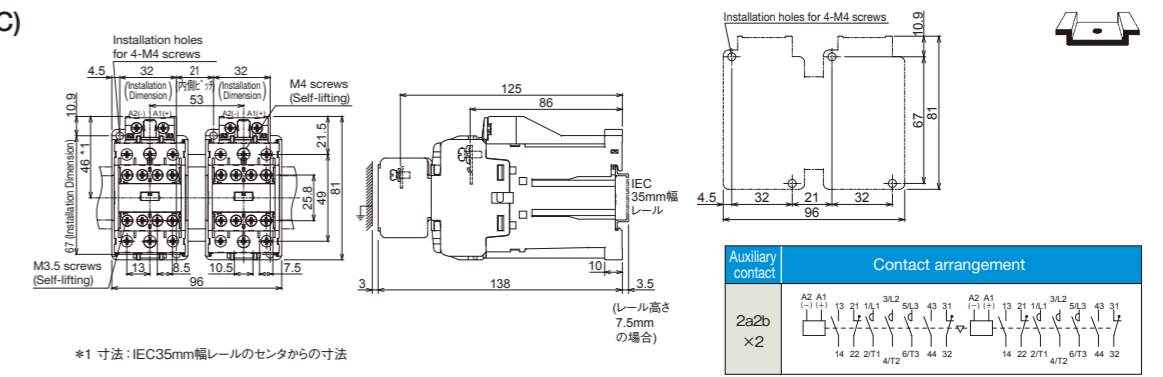


- \*1 寸法: IEC35mm幅レールのセンターからの寸法

# Outline Drawing, Contact Arrangement


## Optional Units

### ● UT-AX2(BC)

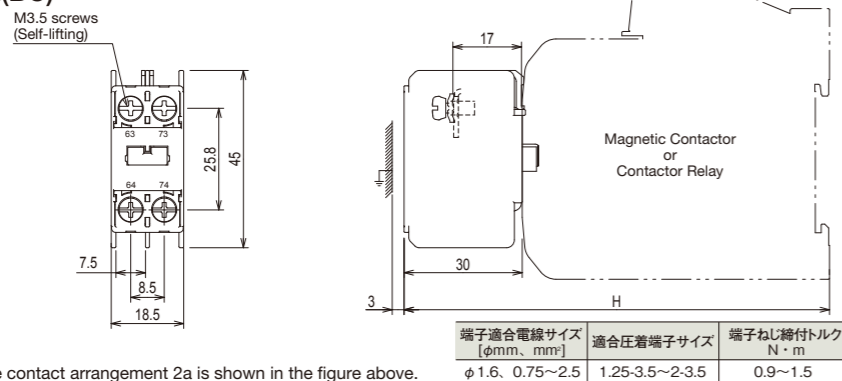


Note: The contact arrangement 2a is shown in the figure above.

### ● UT-AX4(BC)

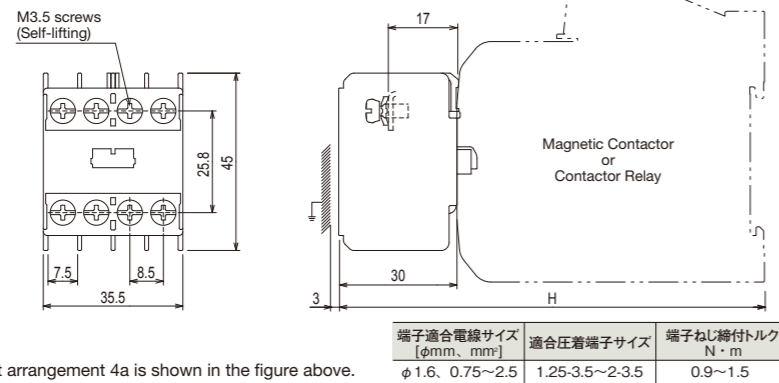

Note: The contact arrangement 4a is shown in the figure above.


### ● UT-AX11(BC)

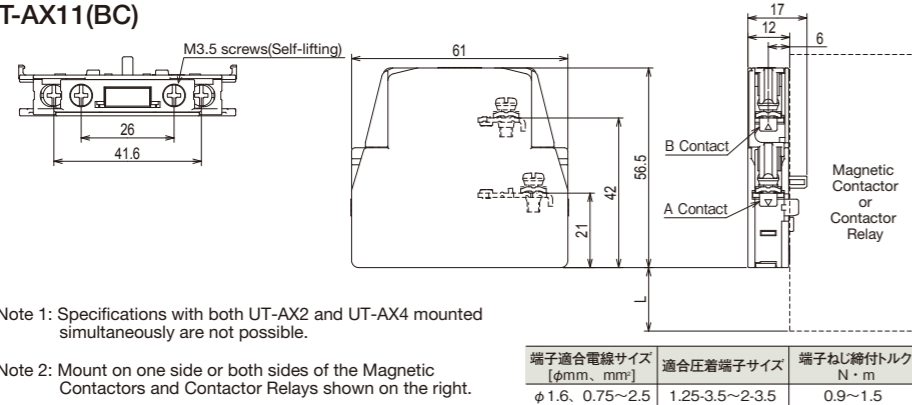


Note 1: Specifications with both UT-AX2 and UT-AX4 mounted simultaneously are not possible.

Note 2: Mount on one side or both sides of the Magnetic Contactors and Contactor Relays shown on the right.

### ● UT-ML11

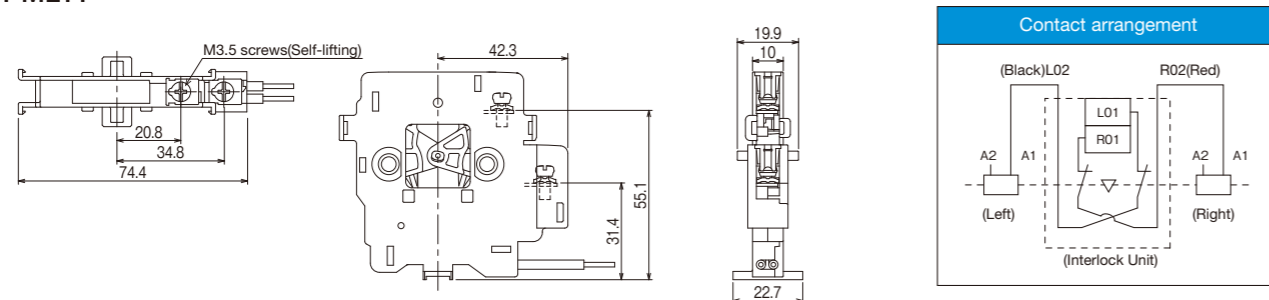


### ● UT-SA21 ● UT-SA23 ● UT-SA13

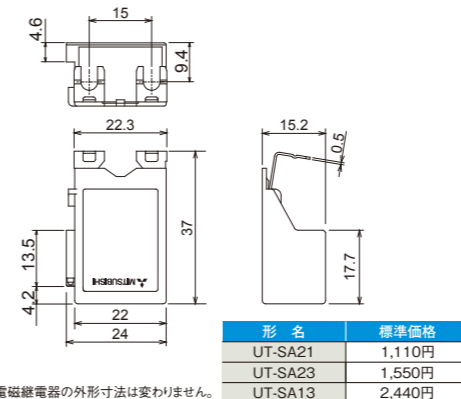



取付後の電磁接触器・電磁継電器の外形寸法は変わりません。

### ● UT-SA22 ● UT-SA25

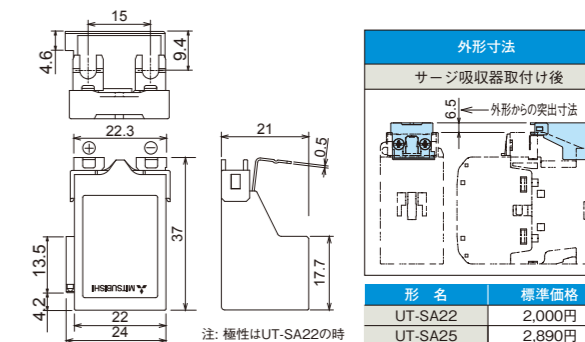


注: 極性はUT-SA22の時


### ● UT-HZ18 ● UT-HZ18BC

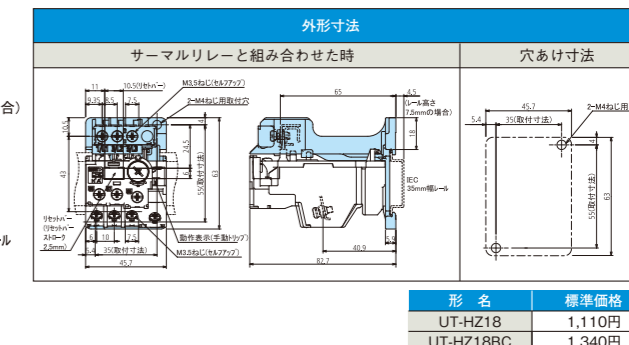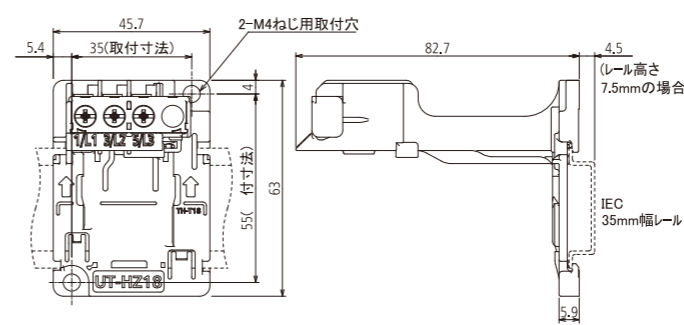


### ● UT-SA3320

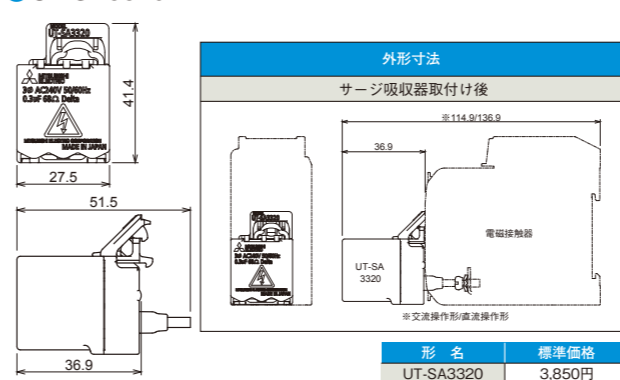

### ● UT-SA3332

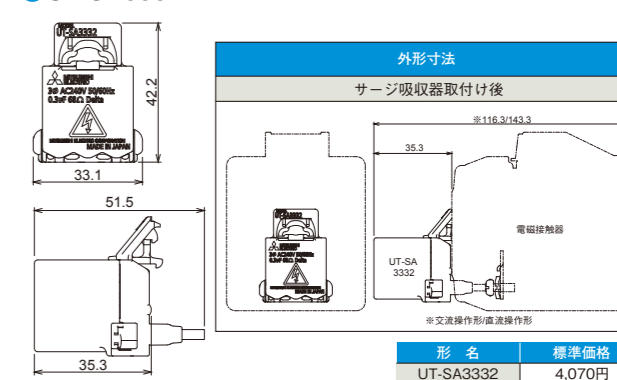

### ● UT-SY21 ● UT-SY22

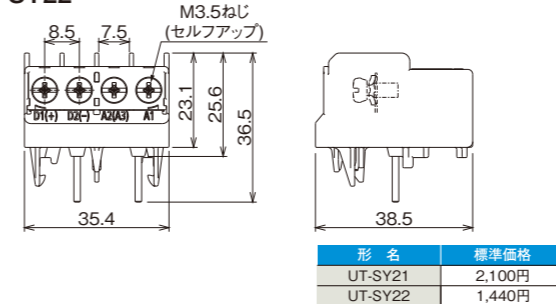



About Handling

Note

Precautions for Use

- ▲ Be sure to periodically check the Magnetic Starters and apply danger prevention measures on the sequence of important circuits. (The Magnetic Starters contacts may suffer from defective continuity, welding, and burning.)
- ▲ When performing installation, wiring, and maintenance & inspection, be sure to disconnect the Magnetic Starters from the power supply. It may cause electric shock. In addition, the malfunction attributable to vibration, impact, and false wiring may exert serious results (machine malfunction, short-circuiting of power supply, etc.) on the Magnetic Contactors.

Performance

The performance described in this catalog is based on the result of a test conducted under the conditions specified in the Standard (IEC60947-4-1 "Low-voltage switchgear and controller" etc.). If actual use condition is different from this test condition, the user must evaluate the condition (by using an actual device).

Use condition

Although the device can operate without any problem when under the conditions described in this chapter, be careful about the following matters.

- (1) Ambient temperature**  
Even when the device is used in accordance with normal usage, deterioration of the insulation will progress. In particular, as the ambient temperature increases, the insulation life is shortened. In general, it is said that every time the ambient temperature increases by 6 to 10°C, the insulation life decreases by half (Arrhenius law). In a case where the ambient temperature is high and voltage exceeding the rated voltage is continuously applied to coil, the coil temperature increases and life may be shortened dramatically.
- (2) Vibration/Impact**  
Although vibration of 19.6m/s<sup>2</sup> and impact of 49m/s<sup>2</sup> do not cause contact malfunction, even when the vibration and impact are below these values but are applied continuously, fatigue failure may cause some trouble. In particular, please note that the resonance of an installed board may exert a large vibration on the product.


Usage environment

- (1) Ambient temperature** : -10°C to 40°C  
(Applied to the outside of the control board) Average daily atmospheric temperature: 35°C (Max.), Average yearly atmospheric temperature: 25°C (Max.)
- (2) Maximum temperature of the inside of the control board** : 55°C However, the ambient temperature of boxed MS type is 40°C (Average yearly temperature of the inside of the control board is 40°C or less.)  
Please note that the operating characteristics of the Magnetic Contactors and Thermal Overload Relays may vary with the ambient temperature.
- (3) Ambient temperature** : 45% to 85% RH However, dew condensation and freezing should be avoided.
- (4) Height above sea level** : 2000 m or less
- (5) Vibration** : 10 to 55 Hz, 19.6 m/s<sup>2</sup> or less
- (6) Impact** : 49 m/s<sup>2</sup> or less
- (7) Atmosphere** : Inclusion of dust, smoke, corrosive gas, moisture, salt content and the like in the atmosphere should be avoided as much as possible.  
Please note that continuing to use the device in a closed condition for a long period may cause contact failure.  
Never use the device under an atmosphere that contains flammable gas.
- (8) Storage temperature/Relative humidity** : -30°C to 65°C 45% to 85% RH However, dew condensation and freezing should be avoided.  
The storage temperature is ambient temperature during transportation or storage and should be within the usage temperature when starting to use the device.

Mounting

Direct mounting

- The device should be mounted in a dry location low in dust and vibration.
- The normal mounting direction is the direction shown in Fig. 1 on a vertical surface, but mounting the device at an inclination angle of up to 30 degrees in either direction is allowed. (Fig. 2)
- Mounting the device on a floor or ceiling is not allowed. (Mounting the device on a floor or ceiling may affect the continuity performance, operation performance, and durability of the contact.)
- If mounting the device in a horizontal orientation cannot be avoided, be sure to rotate the device by 90 degrees in a counterclockwise direction from the normal mounting direction as shown in figure 3 when mounting it. If the device is mounted in a horizontal orientation, its characteristic is nearly unchanged but mechanical durability may be deteriorated. Horizontal mounting of reversing type is not allowed.

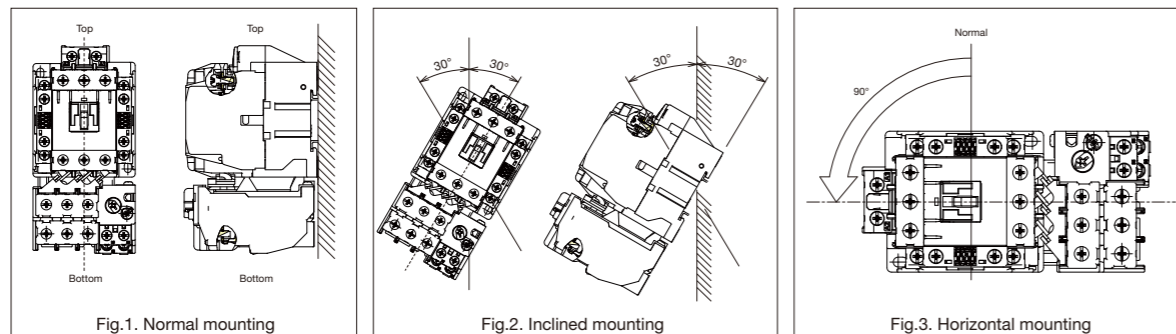

Tightening torque of mounting screw


The device should be mounted by force of tightening torques shown in the right table.

Screw size	Tightening torque of mounting screw N·m
M4	1.2 to 1.9

Mounting of IEC 35mm wide rail


- T10 to T32 types and SR-T type are standard devices allowed to be mounted on an IEC 35mm wide rail.
- DIN, EN, IEC, and JIS C2812 standards-compliant 35mm wide rails come in two types: 7.5mm and 15mm in rail height. Their shapes and dimensions are as shown in the figure below.

Rail	Rail specifications
1	TH35-7.5 Rail width: 35mm, Rail height: 7.5mm
2	TH35-15 Rail width: 35mm, Rail height: 15mm

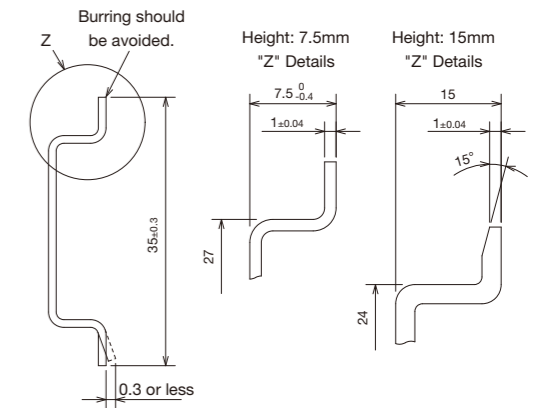


- (3) Maximum pitch of rail mounting screw L(mm)**  
When mounting a rail on a surface of the board, be sure to keep the rail mounting screw pitch below the dimension shown in the following table in order to secure sufficient mechanical strength.

Frame	S-T10, T12, T20, T21, T25, T32	SR-T5, T9
TH35-7.5	250	
TH35-15	500	

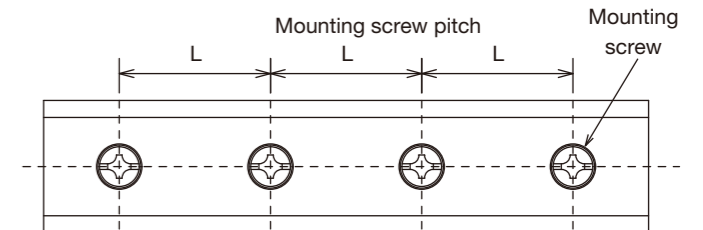

Mounting space and arc space

When mounting the Magnetic Contactors side by side, be sure to keep the devices isolated by a distance longer than the dimension shown in the following table. Also, the Magnetic Contactors and adjacent grounding metal should be isolated by a distance longer than the dimension shown in the following table. The content described in ( ) is applied when additionally mounting auxiliary contacts. Although an arc space is not required in front of the Magnetic Contactors, providing a space longer than the E dimension shown in the following table is recommended in consideration of variation in the Magnetic Contactor's depth dimension, and vibration caused when turning on or releasing the contactor.

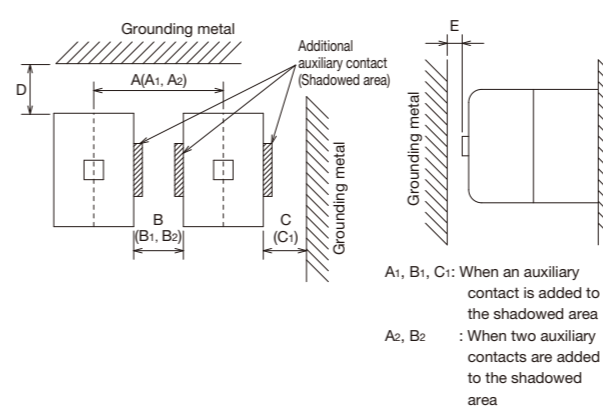

Mounting space and arc space

Frame	Minimum mounting space				Front arc space (Note 1)	Front mounting space E
	A(A <sub>1</sub> , A <sub>2</sub> ) dimension [mm]	B(B <sub>1</sub> , B <sub>2</sub> ) dimension [mm]	C(C <sub>1</sub> ) dimension [mm]	D dimension [mm]		
T10	41 (A <sub>1</sub> = 53, A <sub>2</sub> = 65)	5 (Note 2) (B <sub>1</sub> = 17, B <sub>2</sub> = 29)	10 (C <sub>1</sub> = 22)	15	0	5 (Note 3)
T12	48 (A <sub>1</sub> = 60, A <sub>2</sub> = 72)					
T20						
T21	68 (A <sub>1</sub> = 80, A <sub>2</sub> = 92)					
T25	48 (A <sub>1</sub> = 60, A <sub>2</sub> = 72)					
T32	48 (A <sub>1</sub> = 60, A <sub>2</sub> = 72)					
SR(D)-T5	48 (A <sub>1</sub> = 60, A <sub>2</sub> = 72)					
SR(D)-T9	48	5 (Note 2)	10			3

Note 1. The value of this arc space is a value of IEC and JIS Standards-based closed circuit shut-off capacity test.  
 Note 2. Although the B dimension of T10 to T32 allows closely-attached mounting, when continuing to apply current to the device or when mounting a product high in open/close frequency and high utilization on the same rail, the device life may be shortened in terms of temperature increase and impact, so please keep the space between the devices over the minimum value shown in the above table as much as possible when mounting them.  
 Note 3. E dimension is 3mm when mounting UT-AX2 or UT-AX4 with contactors.

Introduction, Selection and Application, Introduction, Standard, Type Codes, Procedure, Outline Drawing, Safety

About Handling **Note**

Connection


● Applicable electric wire size and tightening torque and terminal dimension of terminal screw

⚠ This may cause overheating or fire. Be sure to properly keep the tightening torque and periodically re-tighten the screw. However, please note that tightening the screw under the status where oil is adhered to the terminal portion may damage the terminal screw even within the existing tightening torque. Electric wires should be properly connected according to the electric wiring diagram. Tightening the terminal screw should be properly conducted within the tightening torque shown in the right table. Insufficient tightening of the terminal screw may cause overheating or cause the electric wire to drop off. Excessive tightening torque may damage the tightening screw. Adhesion of rock paint, thermo label, etc. to electric wire connection or contact may cause heat generation due to defective continuity, so this is very dangerous.

The main circuit terminals of T10 to T32 and TH-T18/T25 types are allowed to be connected via any of single wire, stranded wire, and crimp lug. The main circuit terminals and operating circuit terminals of T10 to T32 and TH-T18/T25 types are self-up terminals, which facilitate wiring.

Model	Terminal dimension and size/type of screw				Applicable electric wire size		Connection conductor thickness (D) [mm]	Applicable crimp lug size (JST Cat No.)		Tightening torque of terminal screw [N·m]		
	Main circuit			Operating circuit	Main circuit	Operating circuit		Main circuit (Note 1)	Main circuit	Operating circuit	Main circuit	Operating circuit
	Dimension of terminal portion A x B x C [mm] (Note 1)	Screw size	Screw type									
SR-T5, T9 SRD-T5, T9	-	-	-	M3.5x7.6	-	-	-	-	-	-	-	
S-T10, T12, T20 SD-T12, T20	7.5x3.7x4.5	M3.5x7.6	cross slot screw with pressure plate	M3.5x7.6	φ 1.6 0.75 to 2.5	φ 1.6 0.75 to 2.5	1.6	1.25-3.5 to 2-3.5 5.5-S3	1.25-3.5 to 2-3.5	0.9 to 1.5	0.9 to 1.5	
S-T21, T25, T32 SD-T21, T32	10.5x5.2x5.5	M4x10.5	pressure plate	M3.5x7.6	φ 1.6 - 2.6 1.25 to 6		3	1.25-4 to 5.5-4		1.2 to 1.9		
TH-T18 (Load side)	7.5x4x4	M3.5x7.6	cross slot screw with pressure plate	M3.5x7.6	φ 1.6 0.75 to 2.5	φ 1.6	2	1.25-3.5 to 2-3.5 5.5-S3	1.25-3.5 to 2-3.5	0.9 to 1.5	0.9 to 1.5	
TH-T25 (Power side / Load side)	10.2x6.8x5/ 10.2x5.7x5	M4x10.5/ M4x10.5	pressure plate	M3.5x7.6	φ 1.6 - 2.6 1.25 to 6	0.75 to 2.5	2.5	1.25-4 to 5.5-4		1.2 to 1.9		

- Note 1: The dimension of the main circuit terminal is a dimension for board conductor wiring. (See the right diagram) The board conductor thickness (D dimension) must be below the allowable connection conductor thickness stated above because of the length of the terminal screw. In case of wiring with two boards used, the total value of two boards must be below the value (D dimension) shown in the table.
- Note 2: In each terminal, two wires or two crimp lugs are allowed to be connected.
- Note 3: The cross slot screws with pressure plate of T Series and those of N or other Series are same in size but different in pressure plate dimension, so please avoid the mixed use of such screws. This may break the insulation barrier or make the wire likely to fall out.
- Note 4: When using IEC60529-based finger safe specification, be sure to use an insulation tube-attached crimp lug.
- Note 5: Tightening the 3 terminal screw excessively without wiring may break the screw and consequently disable the tightening, so please avoid such excessive tightening.
- Note 6: Operational circuits are coil terminals of Magnetic Contactors and control circuit terminals of Thermal Overload Relays.
- Note 7: Please use swaging tool which is recommended by JST.

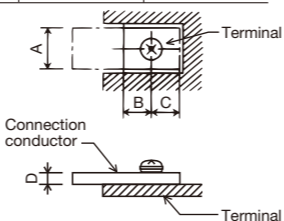


● Application to a circuit exceeding 380V

- When applying MSO, S-T10, T12, T20, MSOD/SD-T12, T20, SR(D)-T5, T9, and TH-T18 types to a circuit exceeding 380V to set a crimp lug wiring, please use an insulating tube-attached crimp lug.
- When applying such parts to a Reversing type circuit exceeding 500V, please use an SR-T type Contactor Relays (XF, XR) as shown in the right figure to set the switching time allowance.

● Wiring direction

Although the upper terminal side is usually set to the power supply side when wiring, the lower terminal side may be set to the power supply side when it is unavoidable due to some reason of the board wiring. However, the mounting direction must be in accordance with the description on Page 44.

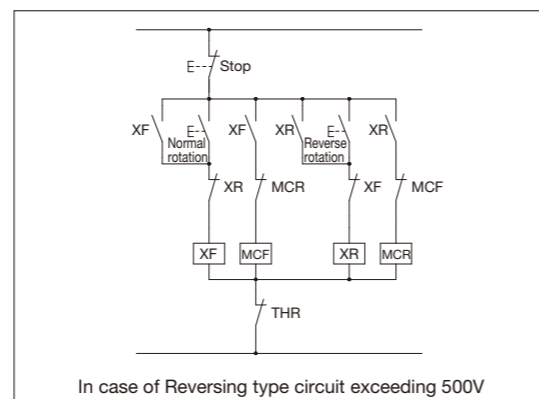

Operating circuit

- ⚠ Applying a low voltage that does not operate the Magnetic Contactors to the operating circuit may cause overcurrent to the coil, which may cause the coil to be burned in a short time.
- ⚠ If the operating circuit wiring is too long, when the coil's instantaneous current flows, the wiring impedance may cause a reduction in the coil voltage, so that the operating circuit may fail to be activated. And, the stray capacitance of the wired line may cause the coil's excitation not to be released even when releasing the excitation.

● Power supply voltage variation range and voltage drop of the operating circuit

- Operating voltage  
When the rated voltage and frequency are applied to the coil at an ambient temperature of 40°C (Inside temperature of the board: 55°C), the device operates without any problem at 85 to 110% of the rated voltage of the coil after the temperature increases and becomes saturated.
- Voltage drop  
Even when the coil is excited at the rated voltage and the voltage drops to 65% of the rated voltage (first 1 to 2 cycles; however in case of 0.1 second or more, 70%) when the main contact is contacted, contact welding does not occur at a current ten times the rated operational current, allowing the device to operate without any problem.
- Voltage/Frequency and coil rating of operating circuit  
The voltage/frequency of the operating circuit and the same of the operation coil must be matched. Applying a voltage exceeding 100% of the rated voltage to the operating circuit when using the coil may acceleratedly deteriorate the coil insulation and consequently reduce mechanical durability, so set the coil's average voltage to 95 to 100% of the rated voltage when using the coil.

Application to special environment

⚠ Please note that the operating characteristics of the Magnetic Contactor and Thermal Overload Relay may vary with the ambient temperature.

● High temperature

When using Magnetic Starters or Magnetic Contactors at high ambient temperature, the temperature may mainly affect the insulation life (continuous electric conduction life) of the operation coil and the aging variation of the molding component. MSO and S-T type without a box are standard products available even at the inside temperature of 55°C.

● Low temperature

Although the Magnetic Contactors may be transported to a cold region or used in such a cold region or under cold conditions such as those found in a refrigerator with the contactor incorporated in a switchboard, the S-T type Magnetic Contactors is applicable as a standard product. Also, MSO-T type Magnetic Starters and TH-T type Thermal Overload Relays of low temperature specification are not manufactured. Applicable temperature range of low-temperature-based products: -50 to 55°C (Operating temperature) -60 to 65°C (Storage temperature)

● Corrosive gas

S-T type Magnetic Contactors is of corrosion resistance-increased specification as a standard product. Corrosive gases that exist in an environment with an Magnetic Starters or Magnetic Contactors used are gases such as sulfurous acid (SO<sub>2</sub>), hydrogen sulfide (H<sub>2</sub>S), chlorine (Cl<sub>2</sub>), and ammonia (NH<sub>3</sub>), and conductive portions can be protected by plating a metal resistant to such gases on the portion. However, because there is no adequate corrosion prevention method for the contact, such gases may increase the contact resistance, resulted in increased temperature. Additionally, if the environment contains some corrosive gas but is under dry condition, this may delay the progression of corrosion, so using the switchboard with the inside kept as dry as possible is also one of the corrosion prevention methods. In the Magnetic Starters and Thermal Overload Relays, corrosion-prevented products (MSO-T□YS, TH-T□YS) of the specification with increased corrosion resistance to such corrosive gases are also manufactured.

● Dust

Magnetic Starters and Magnetic Contactors used in an iron foundry, construction site, or powder conveying machine tend to be subject to a relatively large amount of dust. When using the control board in such locations, the board must be dust-prevention-structured. Also, using the board under hermetically-sealed condition for a long period may cause contact failure.

● Export of the products to tropical regions

The environment of exported products which pass through tropical regions tends to be of high temperature and high humidity, and humidity is the environmental factor that affects the Magnetic Starters and Magnetic Contactors most severely. Humidity is the biggest rust-generating factor and the exported products must be in a structure resistant to humidity. Therefore, it is recommended to put a moisture absorbent (Silica gel) in an amount of 3kg or more per m<sup>3</sup>; so as to lower the humidity.



## [Notes for adopting the product]

Before purchasing and using our products, please confirm the following product warranty.

### Period and scope of warranty

#### ●Warranty period

- (1) The warranty period for our products shall be one year after purchase or delivery to the designated location. However the maximum warranty period shall be 18 months after production, in consideration that the maximum length of distribution period is to be 6 months after shipping.
- (2) This warranty period may not apply in the case where the use environment, use conditions, or the number of open/close operation times specifically impact the lives of products.

#### ●Scope of warranty

- (1) When any failure occurs during the above warranty period which is clearly our responsibility, we will replace or repair the failed portion of the product free of charge at the location of purchase or delivery.

Note that the "failure" mentioned here shall not include such items as scratches and discoloration which do not affect performance.

- (2) In the following cases, even during the warranty period, charged repair services shall be applied.
  - ① Failures caused by inappropriate conditions, environment, handling, and uses other than those specified in catalogs, instruction manuals or specifications.
  - ② Failures caused by inappropriate installation.
  - ③ Failures caused by the design of customer's equipment or software.
  - ④ Failures caused by the customer tampering with our products such as reworks without our authorization.
  - ⑤ Failures caused by the customer failing to correctly maintain or replace components such as spare parts, as specified by documents such as instruction manuals.
  - ⑥ Failures caused by uses of the product other than ordinarily intended.
  - ⑦ Failures caused by force majeure such as fire and abnormal voltage accidents, and natural disasters such as earthquake, wind and flood.
  - ⑧ Failures caused by reasons that were unforeseeable by the level of technology at the time of shipment.
- (3) The warranty that is mentioned here shall mean warranty of the unit of delivery, and any losses induced by the failures of delivered products shall be excluded from our warranty.

#### ●Failure diagnosis

In principle, primary failure diagnosis shall be conducted by the customer. However this job, if requested by the customer, can be performed by us or our service company with charge. In this case, a service fee shall be charged to the customer in accordance with our price list.

### Recommendation for renewal due to life

Our Magnetic Starters and Magnetic Contactors with contacts and mechanical parts have certain wear life in line with the number of switching operations, while our coil wires and electronic parts have aging degradation life influenced by the use environment and use conditions.

Regarding the use of our Magnetic Starters and Magnetic Contactors, we recommend customers to renew the products every 10 years as a rule, provided that the products are used in

line with the number of open/close operations specified by this catalog or the instruction manual.

We also recommend to renew devices other than the Magnetic Starters and Magnetic Contactors described in this catalog every 10 years as a rule.

### Exemption from warranty related to opportunity or secondary losses.

Regardless of in or out of warranty period, loss of opportunity and lost earnings at the customer side caused by the failures of our products, any damages caused by special situation regardless of our foreseeability, secondary losses, accident compensation, damages on anything other than our products, compensation to jobs including replacement work, readjustment of field machinery equipment, startup test run, etc. performed by customers, and damages caused by any reasons for which we are not held responsible, shall be outside the scope of our compensation.

### Exemption from warranty related to opportunity or secondary losses.

- (1) The contents of products shown in this catalog are for your selection of models. When you actually use the product, read the "Instruction Manual" carefully beforehand and use correctly. Please note that the external view or specifications that should not affect the model selection can change without preannouncement.
- (2) When using a product listed in this catalog, you are required to accept that your use should not lead to any serious accident if by any chance the product develops any failures or errors, and, in the event any failure or error occurs, backup or fail-safe functions are in place outside the device by the system.
- (3) The products described in this catalog are designed and manufactured as general products to be used for general industrial fields. For this reason, the products described in this catalog should not be used for the applications requiring special quality assurance systems, such as serious public uses as atomic power plants and other power plants owned by power companies, railway applications and government and public office applications. Note, however, that the products shall be applicable to such uses if the use is limited and the customer agrees not to require specially high quality. Furthermore, when the customer is investigating application for the uses where serious impact is foreseen to the human body and assets and therefore high reliability for security and control system is required, such as aviation, medical services, railways, combustion and fuel equipment, manned transportation equipment, entertainment facilities and security machines, please contact our representatives and discuss any necessary agreement or specifications.

### Supply period of spare goods after production stop

- (1) For the discontinuation of production, we will announce in such media as "Sales and Service" paper created by us.

## [Notes for security related issues]

- Before performing the installation, wiring works, operation and maintenance/check for the products described in this catalog, make sure to read the "Instruction Manual" or "Notes for Use" attached to the product for correct usage.
- With the MS-T Series, the parts such as the contact and coil cannot be replaced so do not modify or disassemble the product. Failure to observe this can lead to faults.
- In spite of our continued efforts to enhance the quality and reliability of our product, the product can fail. The products described in this catalog can bring about serious results, such as malfunctions of machinery, short circuit at power supply, and catching fire), by the malfunction caused by vibration, physical shock and improper wiring. Pay special attention to avoid any secondary accidents such as injuries and fire, as the result of failures or malfunctions.
- When you find any questions or you need more details after reading this catalog, please contact your dealer or our company.

[For using the products described in this catalog, please observe the following items. ]

### Danger

- Make sure to disconnect the power before you perform installation, removal, wiring works, or maintenance/checking. There is a risk of receiving an electric shock or occurrence of a malfunction.
- When the product is energized, avoid touching or coming near the product, especially the terminals having electricity. There is a risk of receiving an electric shock or burn injury.

### Notes

- Use the product in the use environment described in this catalog and Instruction Manual. Do not install the product in any abnormal environment with high temperature, high humidity, dust, corrosive gas or excessive vibration/shock. There is a risk of catching fire, malfunctions, electric shock or failure.
- Avoid applying shocks by dropping or falling the product during transportation and unpacking. This will lead to breakage or failure of products.
- Do not use the product when it has received damage during transportation, installation or wiring. This can cause fire or malfunctions.
- Make sure that only technicians qualified for electric work or wiring should perform installation, wiring works and maintenance/checking of the product.
- Make sure that no foreign objects such as dust, iron powder and wire chips enter the product during installation and wiring works. There is a risk of contact failures and malfunctions leading to damage or fire at the load.
- When you use mounting screws of the wrong size or use a small number of screws than specified, or when the mounting to the rail of IEC 35mm width is defective, there is a risk that the product may fall.
- When you apply wiring works, be sure to use the wire size that suits the applied voltage, flow current and inrush current, and to fasten wires with the correct torque as specified in this catalog or the instruction manual. Defective wiring can cause fires, accidents and failures.
- To terminal screws and mounting screws, apply the torque as we specify for tightening, and regularly apply retorquing. When the tightening torque is too large, the work can damage terminal screws or mounting screws. When the terminal screws or mounting screws slacken or are broken, they can cause overheating or fire, or the body can fall off to create serious accidents.
- Confirm the rated values and specifications, and make sure to use a product that meets the requirements. When you use a product exceeding the rated/specified values, it may cause insulation breakdown leading to earth fault or short circuit accidents, or create the cause of fire by overheating or breakdown due to inability to shutdown.
- When a product described in this catalog is to be used in a facility where a failure can lead to injury to the human body or serious damage to earnings, make sure to install some safety mechanism.
- Apply regular checks to the product and use safety measures on the sequence to the critical circuits. The contacts of Contactors and Magnetic Starters can develop defective conduction, welding or burnout.
- Contactors and Magnetic Starters can create welding of contacts disabling the opening, due to such causes as switching operation for excessive current, abnormal wearing of contacts, chattering at operational instruction contacts, aging degradation and product life. Also the contacts may fail to open due to unexpected mechanical constraints other than contact adhesion. Since the disability of contact to open can cause the machine to go out of control, secure safety by assuming the mechanical constraints or contact welding leading to inability of open/close operations. There remains a risk of fire even when an overload protective device (Thermal Overload Relays) is provided.
- The example connection described in this catalog only shows a typical one to run a system. For the protection of each device and safety measures, the customer is requested to consider the connection for each system.
- Do not apply reworks to the product or disassemble the product. These may cause failures.
- When you dispose of the products, treat them as industrial waste products.



## [Related Products]

## Low-voltage switch | Mitsubishi Motor Circuit Breaker MMP-T Series



Introducing a Motor Circuit Breaker from Mitsubishi Electric!

- ◎Design smaller panels by using the Motor Circuit Breaker, various options and MS-T Series Magnetic Contactor.
- ◎Prevent secondary damage with Motor Circuit Breaker and Magnetic Contactor combination.
- ◎Streamlined wiring terminal BC specifications (option) contribute to improving your productivity.
- ◎Supports your overseas business with compliance to various International Standards as well as the UL Type E/F combination.

## Product specifications

Rated current	0.16 A to 32 A (15 types)
Applicable (compliant) standards	Standard product compliant with various International Standards including IEC, JIS, CCC, TÜV and UL (certified)
Wiring types	Bare wire, rod terminal, Y crimp and round crimp supported
Improvement of wiring	Wiring and operability are improved with connection conductor unit and streamlined wiring terminal BC specifications (option)
Optional units	Auxiliary/Alarm Contact Unit, Short-Circuit Indicator Unit, Line Side Terminal Adapter, Connection Conductor Unit, etc., available
DIN rail mounting	Standard product mountable on rail
Finger protection support	Standard product compliant with IP20 from front side of terminals
Application in North America	Type E/F combination certification acquired. Compatible up to maximum SCCR value 50 kA

## Low Voltage Circuit Breakers | Mitsubishi WS-V Series Molded Case Circuit Breakers, Earth Leakage Circuit Breakers



Technologies based on long year experience realize more improved performance.

- ◎The new electronic circuit breakers can display various measurement items.
- ◎Improvement of breaking performance with new breaking technology "Expanded ISTAC".
- ◎Compliance with global standard for panel and machine export.
- ◎Commoditization of internal accessories for shorter delivery time and stock reduction.

## Product Specifications.

Frame	32-250A Frame
Applicable standard	Applicable to IEC, GB, UL, CSA, JIS and etc.
Expansion of UL listed product line-up	New line-up of 480VAC type with high breaking performance for SCCR requirement
Commoditization of internal accessories	Reduction of internal accessory types from 3 to 1
Commoditization for AC and DC circuit use	Common use of 32/63A frame in both AC and DC circuit
Compact size for easy to use	Thermal adjustable and electronic circuit breakers are same size as 250AF fixed type
Measuring Display Unit (MDU) breakers	MDU breakers measure, display and transmit energy date to realize energy management.

## Three-Phase Motor | High Performance Energy-Saving Motor Super Line Premium Series SF-PR



High Efficiency & Compatible. New Launch of Super Line Premium Series SF-PR Model

- ◎Compared to general-purpose motor SF-JR model, generated loss is reduced by 37% on average, and it is compatible with highly efficient premium IE3.
- ◎Easy replacement is achieved as mounting dimension (frame number) is compatible with general-purpose motor SF-JR model.
- ◎One motor can accommodate different power sources of Japan and the U.S. Three ratings in Japan meet the Top Runner standards, while it corresponds to EISA in the U.S.
- ◎Can be driven by inverters as standard. Advanced magnetic-flux vector control by our FR-A800 achieves steady torque drive up to 0.5Hz.

## Product Specifications

Number of poles	2-poles, 4-poles, 6-poles
Voltage-Frequency	200/200/220/230V 50/60/60/60Hz EISA 230V 60Hz or 400/400/440/460V 50/60/60/60Hz EISA 460V 60Hz
Exterior	Totally enclosed fan cooled type (inside, outside installation)
Protection system	IP44
Electrically-driven power system	Motor with 2-poles over 11kW is dedicated for a direct connection. Motors with 4-poles and 6-poles are for both direct and crossed belt connections.
Rotation direction	Counter-clock-wise (CCW) direction viewed from the edge of axis.
Compatible standard	JEC-2137-2000 (Efficiency is compatible with IEC 60034-30.)

## PLC | MELSEC-Q Series Universal Model



Introducing the high-speed QCPU (QnUDVCPU) for faster processing of large data volumes.

- ◎Realize high-speed, high-accuracy machine control with various iQ Platform compatible controllers and multiple CPUs.
- ◎Easily connect to GOTs and Programming tools using built-in Ethernet port.
- ◎25 models from 10 k step small capacity to 1000 k step large capacity, are available.
- ◎Seamless communication and flexible integration at any network level.

## Product Specifications

Program capacity	10k steps to 1000k steps
Number of I/O points [X/Y], number of I/O device points [X/Y]	256 points to 4096 points/8192 points
Basic instruction processing speed (LD instruction)	120ns to 1.9ns
External connection interface	USB (all models equipped), Ethernet, RS-232, memory card, extended SRAM cassette
Function module	I/O, analog, high-speed counter, positioning, simple motion, temperature input, temperature control, network module
Module extension style	Building block type
Network	Ethernet, CC-Link IE controller network, CC-Link IE field network, CC-Link, CC-Link/LT, MELSECNET/H, SSCNETIII (/H), AnyWire, RS-232, RS-422

## HMI | Graphic Operation Terminal GOT2000 Series GT27 Model



To the top of HMIs with further user-friendly, satisfactory standard features.

- ◎Comfortable screen operation even if high-load processing (e.g. logging, device data transfer) is running. (Monitoring performance is twice faster than GT16)
- ◎Actual usable space without using a SD card is expanded to 128MB for more flexible screen design.
- ◎Multi-touch features, two-point press, and scroll operations for more user-friendliness.
- ◎Outline font and PNG images for clear, beautiful screen display.

## Product Specifications

Screen size	12.1", 10.4", 8.4" (15" coming soon)
Resolution	SVGA, VGA (XGA coming soon)
Intensity adjustment	32-step adjustment
Touch panel type	Analog resistive film
Built-in interface	RS-232, RS-422/485, Ethernet, USB, SD card
Applicable software	GT Works3
Input power supply voltage	100 to 240VAC (+10%, -15%), 24VDC (+25%, -20%)

## Inverter | FR-A800 Series



High-functionality, high-performance inverter

- ◎Realize even higher responsiveness during real sensor-less vector control or vector control, and achieve faster operating frequencies.
- ◎The latest automatic tuning function supports various induction motors and also sensor-less PM motors.
- ◎The standard model is compatible with EU Safety Standards STO (PLd, SIL2). Add options to support higher level safety standards.
- ◎A variety of useful functions provide USB memory support and customization with a PLC function.

## Product Specifications

Inverter capacity	200V class: 0.4kW to 90kW, 400V class: 0.4kW to 500kW
Control method	High-carrier frequency PWM control (Select from V/F, advanced flux vector, real sensor-less vector or PM sensor-less vector control), vector control (when using options)
Output frequency range	0.2 to 590Hz (when using V/F control or advanced flux vector control)
Regenerative braking torque (Maximum tolerable usage rate)	200V class: 0.4K to 1.5K (150% at 3%ED) 2.2K/3.7K (100% at 3%ED) 5.5K/7.5K (100% at 2%ED) 11K to 55K (20% continuous) 75K or more (10% continuous), 400V class: 0.4K to 7.5K (100% at 2%ED) 11K to 55K (20% continuous) 75K or more (10% continuous)
Starting torque	200% 0.3Hz (3.7K or less), 150% 0.3Hz (5.5K or more) (when using real sensor-less vector, vector control)



## MEMO

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

## MEMO

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---